

**DD662B**

**BLUETOOTH®-ENABLED**

**DVD/MP3/CD AM/FM RECEIVER FEATURING**

**6.2" (157mm) WIDESCREEN TOUCHSCREEN DIGITAL TFT MONITOR**



**SOUNDSTORM®**  
L A B O R A T O R I E S

3451 LUNAR COURT, OXNARD CA 93030

PHONE: 1.888.38.STORM

1-805.983.8008

FAX: 1-805.983.7068

TECHNICAL SUPPORT

[www.soundstormlab.com](http://www.soundstormlab.com)



0614



**User's Manual**

**DD662B**

**BLUETOOTH®-ENABLED**

**DVD/MP3/CD AM/FM RECEIVER**

**FEATURING 6.2" (157mm) WIDESCREEN**

**TOUCHSCREEN DIGITAL TFT MONITOR**

## CONTENTS

Panel Introduction .....	02
Basic Function .....	03
Remote Control Operation .....	04
Turn on/off .....	06
Access main interface .....	06
USB/SD Card Operation .....	06
Radio Operation .....	07
Disc Operation .....	08
Play/Eject Disc .....	08
DVD/VCD Disc Playback .....	08
CD Disc Playback .....	08
MP3/WMA Format Disc Playback .....	08
Touch Menu .....	08
BT Operation .....	10
ST. Wheel setting .....	11
External input operation .....	11
Calendar .....	11
Calculator .....	11
Other Operation .....	12
Rear view function .....	12
Access setup interface .....	13
General setting .....	13
Audio setting .....	13
Video setting .....	13
Language setting .....	13
Time setting .....	13
Version .....	14
Touch calibration .....	14
Wiring Diagram .....	16
Trouble shooting .....	16
Specifications .....	17
Accessory .....	18
DVD Parental control function .....	18

Warning: To ensure safety while driving and to comply with laws, drivers should not watch video or operate the video device while driving.

## ACCESSORY

Accessory	Quantity
Wire	1PC
USB Cable	1PC
Remote Controller	1PC
Warranty card	2PCS
Disassemble Key	2PCS

## DVD Parental control function

### DVD Parental control function

★ DVD Parental control function: The default set for DVD is #8 adult, which means all grades of DVD can be read without entering password. To change the default grade, you need to follow the below procedure: Press SETUP button on the remote, display will show the system set up menu and the submenu, select password and enter 0000, you will be able to choose the DVD grade as default.

SPECIFICATIONS

Power supply	DC 12V
Power range	10.8-16.0V DC
Max Current Consumption	15A
Ground system	Negative ground
Power Output	80 WattsX4 Channels

FM tuner

US frequency range	87.5-107.9MHz
European frequency range	87.5-108MHz
Signal / Noise ratio	55dB
Stereo separation	30dB
Search station volt	20-30dBuv

 
AM tuner

US frequency range	530-1710KHz
European frequency range	522-1620KHz
Limit noise sensitivity	32dB

DVD player

S / N Ratio	70dB
Frequency response	20Hz-20KHz

PANEL INTRODUCTION

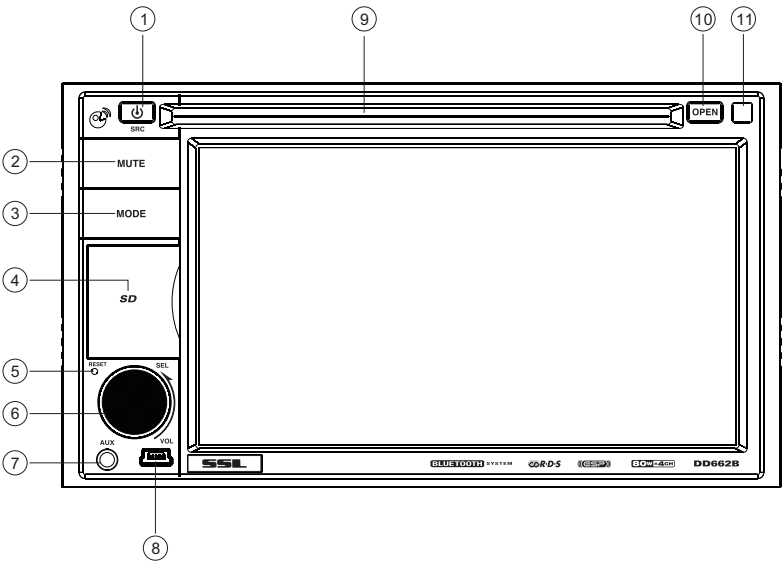

- 1. ⏻/SRC Button
- 2. MUTE Button
- 3. MODE Button
- 4. SD Slot
- 5. RESET
- 6. SEL/VOL Button
- 7. AUX Slot
- 8. USB Slot
- 9. Disk Load Slot
- 10. OPEN Button
- 11. IR

## BASIC FUNCTION

### 1. ⏻/SRC Button

Press this button shortly to power on, press this button longer to power off.  
In normal situation, press SOURCE button can return to the main menu.

 
### 2. MUTE Button

Press this button to shut off sound output, repress this button to resume sound output;  
Press this button longer to turn on/off TFT LCD display.

### 3. MODE Button

When the unit is power on, Repeat press this button can switch to different function mode as following picture.

Note: When the device without connecting to USB、SD or DVD no disc inside, the system will automatically skip these related working mode.



### 4. SD Slot

Insert SD card, the unit will play the files automatically.

### 5. RESET

Press this button and this unit will be restored to the initial state.

### 6. SEL/VOL Button

Turn this button can adjust the volume, Press this button can adjust the mode according to personal likes.

### 7. Dual (front and rear) AUX

To input external audio.

**⚠ Warning:** You can only use either front or rear AUX at a time, Never connect both front and rear AUX at the same time.

### 8. Dual (front and rear) USB

Insert USB removable device so as to read audio/video files.

**⚠ Warning:** You can only use either front or rear USB at a time. Never connect both front and rear USB at the same time! This could cause malfunctions.

### 9. Disk Load Slot

Opening for disks to enter or retreat.

### 10. OPEN Button

Press this button can eject the disc.

 
### 11. IR

To receive infrared signal from the remote control.

## WIRING DIAGRAM

This player is equipped with ISO standard connector, please follow below instruction:

- Red - ACC ON (+12V) (+)
- Yellow – 12 V Constant (+)
- Black – Ground wire (-)
- Blue - Power Antenna / Remote Amp Turn On (+)
- Violet/White-Reverse Gear Signal (+)
- Grey/Grey black - Right front speaker (+/-)
- White/White black - Left front speaker (+/-)
- Purple/Purple black - Right rear speaker (+/-)
- Green/Green black - Left rear speaker (+/-)
- Light Green-Parking Brake (-)

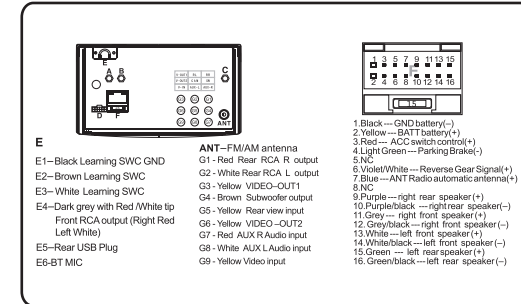


## TROUBLE SHOOTING

PROBLEM	CAUSE	SOLUTION
Cannot power on	Check fuse	Change fuse same as the old one
	Some factors cause MPU wrong operation	Press RES button on the panel by penpoint, then, power on
After ignition switch off, setting information all lose	Change battery or fuse	Reset information and save
Poor performance of radio station	Weak signal	Move the car to another place, then research
Cannot load disk	There is a disk inside	Remove disc before inserting another one
	Disc is scratched	Change new disc
	Put wrong side of disc into the unit	Insert in the disk with sign side up
Cannot play disc	Lens is dirty	Clean lens by lens clean disc
	There is only one language/subtitle in disc	If disc is not with multi-language/subtitle, it cannot switch language/subtitle
Cannot switch language/subtitle	Other factors cause MPU wrong operation	Press RES button on the panel by penpoint, then, power on
No image	It's not allowed to watch image during driving	Park the car in a safe place, put the car stall in "P" position, pull up the hand brake, parking brake wire must be grounded

## Touch screen Calibration

✦ Please follow the below instructions to calibrate when there is no touch or touch is not accurate.

**Step 1:** Press the mode button in the unit to switch to DVD mode.


**Step 2:** Insert a DVD disc, after DVD is loaded, press the stop button “” as show in picture (1). in the remote short, the unit will display as show in picture (2).

 


Picture ( 1 )



Picture ( 2 )



**Step 3:** Press “” in the remote as show in picture (3), the unit will display as show in picture (4).

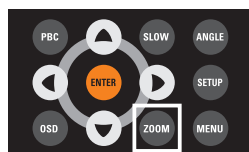


Picture ( 3 )




  Picture ( 4 )

 **Step 4:** Press “” button in the remote and then quickly press “” button as show in picture (5) and you will enter the touch calibration interface as show in picture (6).

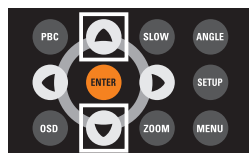

Picture ( 5 )

 

Picture ( 6 )


**Step 5:** Use the touch pen to touch top left corner, top right corner, down right corner, down left corner, when the cross cursor stop at each corner, touch the center of the cursor. Then the panel will display OK and leave the calibration interface and the unit regained touch as show in picture (7).



Picture ( 7 )

## Remote Control Operation
 
### REMOTE CONTROL FUNCTION

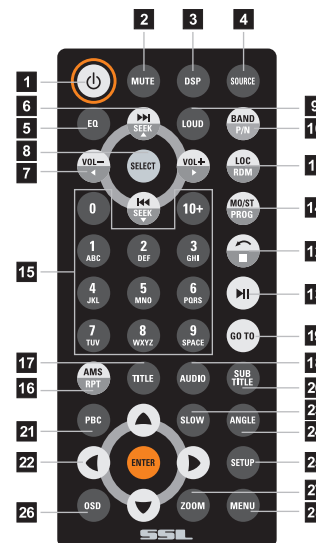

1 POWER ON/OFF	15 0-10+
2 MUTE	16 AMS/RPT
3 DSP	17 TITLE
4 SOURCE	18 AUDIO
5 EQ	19 GO TO
6 SEEK+/SEEK-	20 SUB TITLE
7 VOL+/VOL-	21 PBC
8 SELECT	22 UP/DOWN/L/R ENTER
9 LOUD	23 SLOW
10 BAND-P/N	24 ANGLE
11 LOC/RDM	25 SETUP
12 STOP	26 OSD
13 PLAY / PAUSE	27 ZOOM
14 MO/ST-PROG	28 MENU

#### 4. SOURCE Button

Press this button to change mode.

#### 5. EQ Button

Press this button to choose POP、ROCK、CLASSIC、EQ off.

#### 6. SEEK+ (▶▶) / SEEK- (◀◀) Button

In normal playback MP3、USB、SD songs, Press this button to previous song or next song.

#### 7. VOL+ (▶) / VOL- (◀) Button

Press this button to increase or decrease volume level.

#### 8. SELECT Button

Press this button to choose sound feature.

#### 9. LOUD Button

Press this button to startup LOUD function.

#### 10. BAND-P/N Button

In radio mode, press this button to choose band.

In VCD、DVD mode, press this button to choose PAL、AUTO or NTSC system.

#### 11. LOC/RDM Button

In radio mode, press this button to switch between local and direction.

In VCD、CD mode, press this key to randomly play.

#### 12. STOP Button

Press this button to stop playing.

#### 13. PLAY/PAUSE Button

Press this button to switch between play and pause.

In stop mode, press this button to play.

#### 14. MO/ST-PROG Button

In radio mode, press this button to choose stereo or mono station.

In audio mode, it can help STOP button to programmed play.

#### 1. POWER Button

Press once to switch on, press again to switch off.

#### 2. MUTE Button

Press once to turn off audio output, press again to resume volume level.

#### 3. DSP Button

Press this button to show the time.

# INSTRUCTIONS

## 15. 0-10+ Button

Press this button to choose desired song、 section、 preset stations.  
Decimal numbers, for example the 19th song, press 10+ and 9 button.

## 16. AMS / RPT Button

In radio mode, press this button to browse stored stations.  
In audio mode, press this button to play repeatedly.

## 17. TITLE Button

In DVD mode, press this button to play back to the top menu of disc.

## 18. AUDIO Button

In DVD mode, press this button to switch language of dialogue.  
In VCD mode, press this button to choose left track、 right track and stereo.

## 19. GO TO

In DVD mode, press this button, you can define playing time.

## 20. SUB TITLE Button

In DVD mode, press this button to switch language of subtitle.

## 21. PBC Button

In VCD mode, press this button to display all song menus, work with number button to choose songs.

## 22. UP、 DOWN、 LEFT、 RIGHT、 ENTER Button

When playing MP3, USB, SD returns to song menu, up、 down selections can be up / "⬆" button or down / "⬇" key to select up and down, select and press "ENTER" key to confirm.  
The selected tracks can be played. Press the left or right arrow keys to "⬅" or "➡" key, can be on the next page function operation.

## 23. SLOW Button

In audio mode, press this button to slow backward and slow forward.

## 24. ANGLE Button

In DVD mode, press this button to change play angle.

## 25. SETUP Button

In audio mode, press this button to choose different set items.

## 26. OSD Display

Press this button to display the title chapter and the left time.

## 27. ZOOM Button

In DVD/VCD mode, press this button to ZOOM in.

 
## 28. MENU Button

Press button to back to the main menu.


## BATTERY CHANGE

When control distance of remote control becomes shorter or no function, please change battery. Please confirm polarity before change.


One hand press stopper, then pull out battery.



Put battery into controller.

 


Insert battery holder into controller.

 

# INSTRUCTIONS




## Version

Touch the icon [  ] in setting interface to enter the interface below to check the software version number of DISC/MCU/TFT/BT (The version information is displayed please prevail in kind.)



## Touch calibration

If the touch position is biased, you may touch the icon "Calibrate" for calibration.

Touch the icon [  ] in setting interface to find the setting bar [ Calibration < Select > ], and then touch any icon [   ] to enter the following calibrating interface.



## Touching methods

 
Use touch pen to click the center of "+" icon, and move along with center of "+" icon so as to calibrate the screen. It shall automatically save data and exit after screen calibration. Please accurately click all positions on screen, or the accuracy of touch calibration shall be affected.





## Access setup interface

Click [Setting] icon on main interface to access setup interface.

### General setting

 Click  icon on setup interface to access general setting interface, as shown in below PIC 1 diagram:

 In General setting interface, you may set the functions On or Off, or click the icon  to preview the wallpapers up and down and set your favorite wallpaper

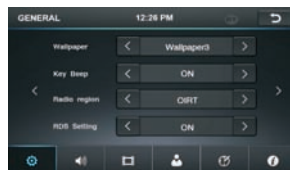


PIC 1

### Wallpaper

 Touch the icon  in wallpaper bar  to change the wallpaper.

### Audio setting


Click  icon on setup interface to access audio setting interface, as shown in right (PIC 2) diagram:

You can turn on or turn off the existing functions on audio setting interface and adjust the rearview volume.




PIC 2

### Video setting

 
Click  icon on setup interface to access video setting interface, as shown in right (PIC 3) diagram:

At video setting interface, you can adjust brightness, contrast, saturation and hue of the video.

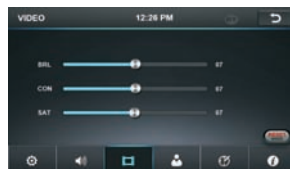


PIC 3

### Language setting

 
During use, you can select your familiar language to display menu by language setup. Click  icon on setup interface to access language setting interface, as shown in right (PIC 4) diagram:


In the language bar  you need to set, touch the corresponding icon  to select your familiar language.

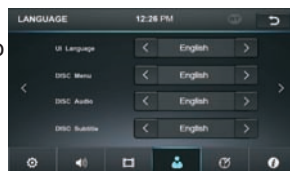

PIC 4

### Time setting

Click icon on  setup interface to access time setting interface, as shown in right (PIC 5) diagram:

Touch the icon  of Time mode, Year, Month, Date, Hour, Minute for setting.



PIC 5

 
## Turn on/off

When the ignition switch is put in ACC or ON position, Press power button on the front panel to turn on the unit. After the host starts, hold power button for 3 seconds, the host will turn off.

### Access main interface

Turned on, the interface to return the icon to switch to the main interface. As shown below:



Touch the function icons so as to access the corresponding function operations. Touch the  icon or use the touch pen/finger gently sliding around the screen to switch to the main menu page.

### USB/SD Card Operation

When there is a USB device/SD card connected, the unit can conduct the playback of audio/video/image files in the USB device/SD card.

#### Insert/Eject USB storage device

1. Connect a U disc recorded with media information to the unit by a USB connecting cable.
2. When there is a need to eject the USB device, exit the USB device playback screen first, and then take out the device.

#### Insert/eject SD card

1. Insert a SD card recorded with media information into the SD card slot in the unit correctly until it is locked.
2. When pulling out the SD card, exit SD card playing state first, then press the SD card and it shall pop up after unlocking.

#### Enter/exit

Insert a USB storage device or SD card to automatically play data contained in it. If the unit has connected with a USB device or SD card, touch [USB] icon in the multimedia interface to enter into the external storage playback interface; Touch [SD] icon to enter into the SD card playback interface. During playback, touch the top center area of the screen to pop up the touch menu, operate touch menu to perform various playback controls.

 
#### Play

After SD card/USB removable device being read out, the operation methods are similar to disk operation methods.

## Radio Operation

### 1. Enter/exit

Touch [Radio] icon in the main interface to enter into the radio interface.

Touch  icon to return to main interface, and then touch other function icons so as to exit radio mode.

### 2. MUTE on/off

Click  icon to switch MUTE on and off.

### 3. Loudness on/off


Click  icon so as to turn on/off loudness function.

### 4. Search/Save radio stations


Short press  icon to browse the stored radio stations.

FM band can save 18 radio stations (Six stations for FM1/FM2/FM3), AM band can save 12 radio stations (Six stations for AM1/AM2).

### 5. Band selection

Click  icon so as to switch among FM1, FM2, FM3, AM1, AM2 bands.

### 6. Turn on/off the Long/Short-range

Click  icon, the search pattern in the local search (LOC) and remote search (DX) switch between.

LOC feature is turned on after the signal is strong enough only to listen to those in good condition and receiving radio station; DX enabled, you can receive remote weak radio signals.

Note: This function is available only when FM band is selected.

### 7. Stereo on/off

When receiving stereo signals, click  icon to turn on/off stereo.

### 8. TA (Receive traffic information)

ON: When the traffic station is turned on, the radio will automatically search for traffic stations. After a station is searched, screen displays "TP". Only when traffic information is broadcasted can it be received, after traffic information is completed, the radio will automatically switch to the previous mode.

OFF: Repress [TA] button to close TA function. In other modes, traffic announcement will automatically switch to radio mode, after the traffic announcement is completed, it will automatically switch to the previous mode.

 
### 9. AF

Touch the button to turn the AF function on/off. AF function is turned on, When the received station signals become weak, the radio will automatically fine-tune to other frequencies. When receiving an emergency announcing, the screen will display warning message.

### 10. PTY

Touch the button the screen displays program types, users can search station according to program type.

Note: If the unit does not have RDS function, it has no AF/TA/PTY function.

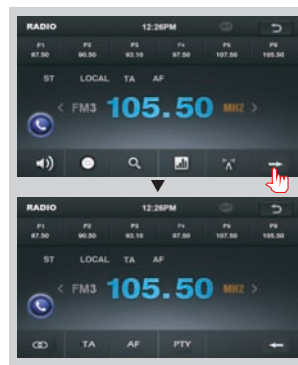


## Other Operation

### Rear view function

In any running state, the video signal can switch to reverse video state when reversing the car, and the system shall return to its initial running state after reversing the car.

### ⚠ Warning

 Do not rely on CCD system completely, please make sure you use direct eyesight while driving. Back rearview system only assists in driving. As the distance range of rearview system is limited, completely relying on the rearview system during driving may cause accidents.

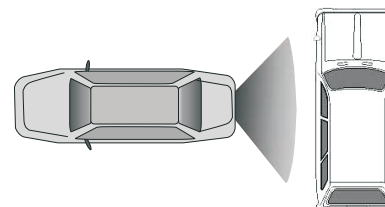


Reverse field simulation




Rearview backup image



## ST. Wheel setting

 1. Click on the [  ] icon in the main interface into the SWC. settings interface.
  2. The original vehicle to the control line positive, negative with the machine control line in the positive and negative connection.
  3. Click the SWC buttons will appear corresponding operating tips, and fundamental operation prompts the SWC feature set.
  4. Set function to save the settings and click the Confirm icon to confirm.
- Note: To modify function settings, repeat procedures 3~4.  
To reset functions, click Reset icon, all the settings set before shall be cleared, repeat procedures 3~4 for resetting.

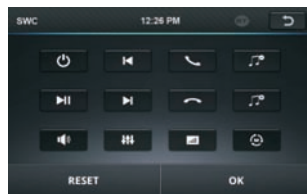


## External input operation

 
Connect the video input plug with external video input jack, and connect the audio input plug with external audio input jack.  
Touch [AUX-IN] icon on main interface to access external AUX-IN interface.



Audio → You can adjust the volume, bass, pitch for input audio. You can adjust the speaker volume by adjusting the front and back, left and right column.  
Video → You can adjust the brightness, contrast, saturation and hue for input video. You can also choose the video standard mode.


## Calendar

Touch the icon [  ] in main interface to enter the following Calendar interface:

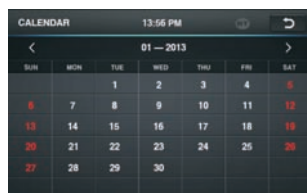

## Calculator

 Touch the icon [  ] in main interface to enter calculator interface to operate + / - × ÷

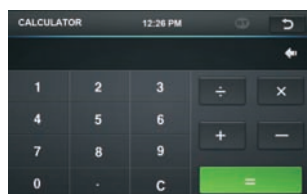


## Disc Operation

### 1. Play/eject disc

Play disc

Insert the disc into the disc slot with the printing surface up, system will detect the disc and automatically take it in to read and play.

 Eject disc

(1) Click [  ] button on the panel to eject the disc.

(2) If a disc has not been took away 15 seconds after it is ejected, system will automatically take in the disc but not play.

⚠ Do not insert two discs or more.

### 2. DVD/VCD disc playback

 
During playback of disc, touch the middle lower area of the screen to pop up the touch menu, operate the touch menu to perform various playback controls. (PIC 1)

### 3. CD Disc Playback

After a CD is inserted, system shall access disk reading state immediately.

When there is a disk in the device, click [Disk] at the main interface so as to access disk reading state.

After the disk being read out, system shall automatically play in sequence.

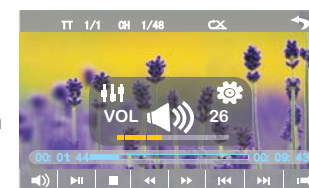


PIC 1

### 4. MP3/JPEG/MPEG4 disk playing

 When the disk contains readable files, such as MP3/JPEG/MPEG4 files, it shall be automatically read out and played after slipping into DVD player.

During playing, touch the screen area and the touch menu shall pop up. Operate the touch menu for various playing.

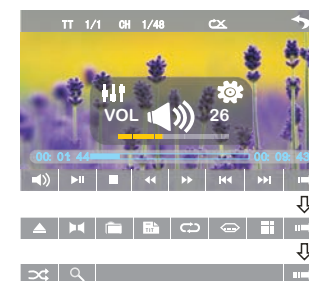

### 5. Touch Menu Function Description

 — MUTE

Touch this icon to switch MUTE on and off.

 Play/pause

Touch the button to pause, retouch it to continue to play.

 Stop

Touch the button to enter into pre stop status.

 Fast forward/backward

Consecutively touch this button to select the speed of fast-forward/fast-backward.

 The previous/next song

Touch the button to select the previous/next song.

 Access next menu

Touch it to access the next menu interface.

 Disc

Touch this icon to eject disc.

 Stereo on/off

Touch it so as to turn on/off stereo.

## Return to root menu

Touch this icon, it shall return to root menu of disk in DVD state and access PBC menu playing in VCD state. All chapters in the disk shall be displayed on the interface, touch the chapter icon directly for playing.

## Access title menu

Press this button to return to title menu of the disk. Directly click menu bar at title menu interface for playing.

## Repeat play

In playing state, touch this button to start repeat play function:

Chapter repeat → Title repeat → Repeat All → Off

 During VCD playing, this function only works when PBC is off.

## Language selection

Touch this button to select language.

## Digit keyboard

Touch this button and digit keyboard shall appear, click number buttons directly to select tracks for playing.

## Switch play order

Touch this button to switch the play order.

## Zoom in/Zoom out image

Touch this button to zoom in /zoom out the image.

★ Under audio/video playing mode or radio mode, the screen center will display the picture below when adjusting the volume button.



## Setting



Touch this button to enter setting interface


## EQ


Touch this icon to display EQ mode one by one for selecting.

EQ OFF → POP → ROCK → CLASS

## 1. Enter/exit

Touch the icon [  ] in main interface or under Radio/SD/USB/Media/BT Music status to enter BT [  ] main interface;

 Touch  icon to exit BT interface.

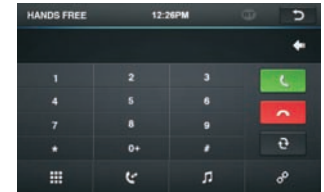


## 2. Pair/link


To use BT hand-free function, make connection first, i.e. match the host with the BT mobile phone.


### Operation methods:

Set the host to be matching state, and open the BT of your mobile phone and use the mobile phone to search device, the mobile phone shall prompt to match password with the BT when it has searched the BT device. Input BT password (0000) to the mobile phone and confirm. The mobile phone shall prompt whether authorize to this device, please select [Yes]. Phone and BT shall automatically connect within 20 seconds. Under any working mode, the host shall convert to BT state if there is an incoming call. And the host shall restore to current mode after hanging up.

 When the BT device matches with this device, the connection status shall display "device paired", otherwise, it shall display "SEARCHING FOR DEVICE". After connect successfully, will show BT friendly name "BOSS AUDIO".

## 3. Dialing

You can dial on mobile phone directly or input phone number through the number buttons on the screen, click  to delete if there is input error.

After input the phone number, click  to make a call, and click  to hang up the phone.


Click  during a call so as to switch the voice between car speaker and mobile phone.

## 4. Call records



Click  to access call records interface.

 
 
 Touch this button to check all the dialed phone numbers.

 Touch this button to check all the phone numbers of received calls.


 Touch this button to check all the phone numbers of missed calls.

## 5. BT music

Touch the icon [  ] or the [  ] in the main interface to enter BT music interface, as is shown below:

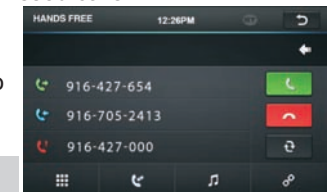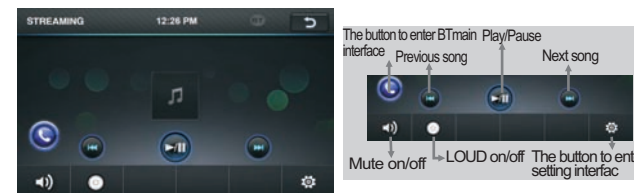

## 6. Disconnect BT

Disconnect: When there is a need to disconnect the BT device, directly touch the icon [  ] at lower right corner of the BT main interface to disconnect the BT device.