

## **⚠ Warning**

- ▶ Read this manual before using this product.
- ▶ This product is composed of precision components and shall not be dissembled unless approved or authorized by us, otherwise we shall not provide any maintenance
- ▶ protect the product from moisture and shock



**Product structure**

**Important:** Do not hit or press the monitor  
Do not confuse the positive and negative poles  
As there is high voltage inside, do not dismount  
the product unless you are a professional.

**Special :** Our pillow products with adjustable intervals have  
been patented in Japan. Nobody shall take our  
products into Japan after modification or through  
transfer, otherwise they shall bear any consequence  
arising therefrom.

**The specifications of this product are subject  
to our modification without notice.**

## How to use the pillow monitor

### Product specifications

Name: TFT-LCD color monitor  
Mode: N/P  
Resolution: 480x234xRGB=336960  
Power supply: +12V  
Power: 6W

### Operation environment

1. Ambient temperature . . . . . -10°C—55°C
2. Relative humidity . . . . . <90% (+55 °C)

### 7 " Weight and size (6/case)

Net weight: 1.18kg  
Gross weight: 1.88kg  
Net weight/case: 7.08kg  
Gross weight/case: 11.28kg

### 7 " Weight and size (12/case)

Net weight/case: 14.16kg  
Gross weight/case: 21.95kg

### Size (6/case)

Package box size: 58.3x29.5x12.3  
Package case size: 59.5x39x31.3

 
### Size (12/case)

Package box size: 58.3x29.5x12.3  
Package case size: 59.8x39x61

Thanks for your support. To ensure long-term trouble-free service of the product, please read this Manual carefully before using the monitor.

### Structure

- 1 Colour LCD screen
- 2 Frequency infrared transmit of stereo
- 3 Infrared Remote Reception
- 4 Analog minus
- 5 Menu
- 6 Analog plus
- 7 Power switch
- 8 Adjustable steel Pipe



### Remote control



Menu  
Press this button repeatedly for the following

BRIGHT  
CONT  
COLOR  
TINT  
RESET  
TINT (For ntsc mode only)

## Installation

1. Take down the original pillow in the car.
2. Install the pillow of this monitor. Adjust the steel tube in or out (max. interval: 5cm) according to the interval between pillow holes so that the interval between steel tubes of the pillow monitor coincides with that between steel tubes of the original pillow.
3. The circuit connection of the pillow monitor is very simple. As shown in Fig. connect the +12V power of the sound system (red line to +, black line to ground), and then connect the video signals.
4. After the pillow monitor is connected properly, press the Power switch and the screen lights up; press Menu, adjust Analog Plus or Analog Minus to the desired mode, or use the remote control if any .



100mm

Min. Interval



190mm

Max. Interval



Move the steel tubes back and fro to pull them in and out so that the interval between steel tubes coincides with that of the original pillow.

## Install the pillow



The circuit connection of the pillow monitor is very simple. As shown in Fig. connect the +12V power of the sound system (red line to +, black line to ground), and then connect the video signals. Connect the video signals, hide the connector in the base

## How to use the accessory tubes



As pillow holes are of different sizes, this product is provided with two tubes 12mm in diameter. When the pillow hole is large, fit this fitting to meet different needs.