



User Manual

S11.2CBL

***11.2" (284mm) Widescreen Flip-down TFT Monitor
With Built-In DVD Player***

TABLE OF CONTENTS

A.Specifications	1
B.Wiring Diagram	1
C.Unit Description	2
D.Remote Description	3
E.Remote Control Button Description	3
Remote Control Operation and Battery Care	4
G.Manual Setup	5
1. Picture	5
2. Option	5
H.System Setup	6
1.Initial Setup	6
2.Audio Setup	7
3.Dolby Setup	8
4.Video Setup	8
5.Basic Parameter Setup	9
I.USB/SD Function	10
J.Attention	10
Troubleshooting	12

A. Specifications

 

- High Resolution 11.2 inch Active Matrix 16:9 Display.
- Resolution: 1280x800
- Built-in slot-load DVD player
- Full DVD player Faceplate Controls.
- Type of disc: DVD-5, DVD-9, DVD-10, DVD-18, DVD±R/RW, CD-DA, CD-R, CD-RW, MP3, VCD, SVCD, MPEG-4.
- Supported memory Card: SD (Secure Digital Memory), MMC (Multi Media Card).
- Supported USB Host.
- 1 Audio&Video Output.
- 2 Audio&Video Input.
- Built-in IR transmitter. A(2.3/2.8 Mhz)/B(3.2/3.8 Mhz)OFF
- Built-in FM modulator. (87.7/88.1/88.5/88.9/106.7/107.1/107.5/107.9 Mhz)OFF
- Mult-language Selection.
- Panel swivel: 270° (Left 90° and right 180°)
- Video System: NTSC/PAL/AUTO
- Dual Function Remote.
- Signal to Noise Ratio: >=75dB.
- Audio Output: 500mV RMS.
- Operating Voltage: DC + 12V Input (10V-15V).
- Operating Temperature: -10°C~60°C.

B. Wiring Diagram




C. Introduction of sketch map

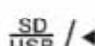

- 1.  Power (on/off)
- 2.  NEXT / Down
- 3.  PREV / Up
- 4. MENU MENU
- 5.  USB, SD Switch/Left
- 6.  Play Stop/Right
- 7.  Light switch
- 8. OPEN Open button
- 9. Remote receiver
- 10. IR Transmitter




 D.Remote control function description

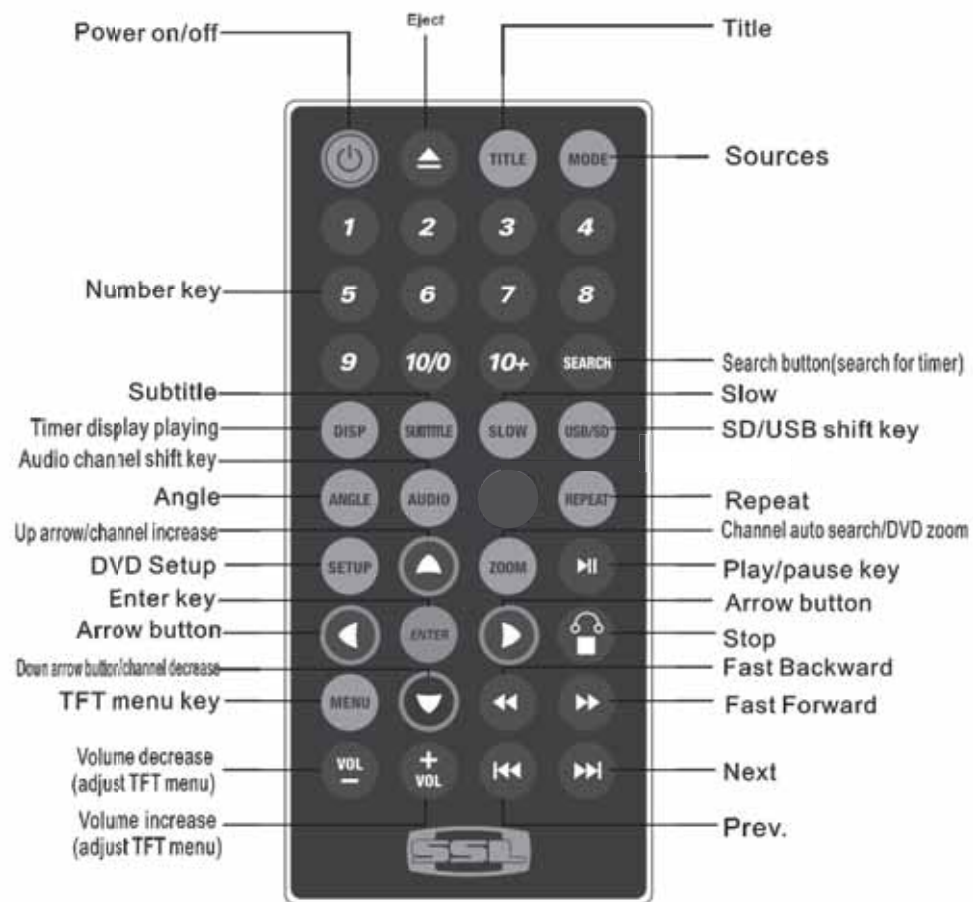

E. Remote Control Operation and Battery Care

 1. Reference to instruction for remote control (shown as pictures), pull out the battery tray and insert the battery (type CR2025) with the stamped (+) mark facing upward. Insert the battery tray into the remote control.
2. Direct the remote controller to infrared receiver window of the machine within 60 degrees and 5 m without any barriers between them.
3. Commonly the life-span of the batteries is about one year, always replace the old set of new batteries.
4. Please pull out the separation film before when using the remote controller.

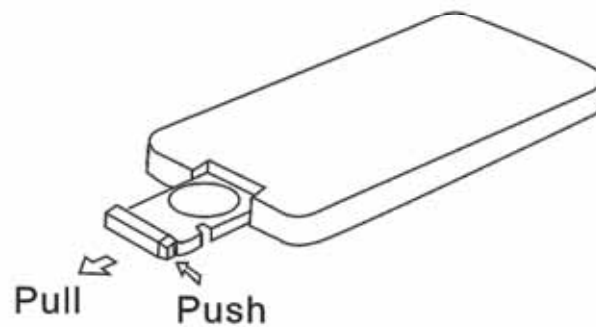

WARNING:

Store the battery where children cannot reach; Do not recharge, disassemble the battery. Dispose of properly.

G. Menu setup

Menu setup method:

Enter the menu: press  button on remote control panel, or press MENU

Up/down button: move cursor to choose the item you need

Right/left button: move cursor to choose the item you need

Play/pause button: confirm the item you want

 
1. PICTURE



2. VOLUME



3. OPTION

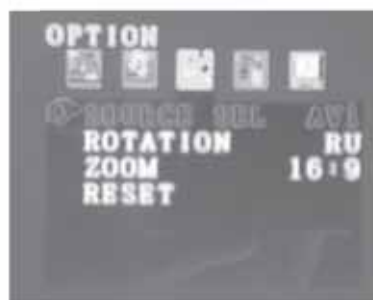



4. SYSTEM




H. System setup

System setup operation method:

Enter the menu: press  button on remote control panel enter the setup menu
Up/down button: to choose the item you need by moving up/down cursor
Right/left button: to choose the item you need by moving right/left cursor

Enter button: press  to choose the item you need

Again press  to withdrawal set up

1. General setup

General	Audio	Video	Preferen
-- General Setup Page --			
Tv Display	Ps		
Angle Mark	On		
Osd Lang	Eng		
Captions	Off		
Screen Saver	On		
Hddc	1x		
Last Memory	Off		
Go To General Setup Page			

General	Audio	Video	Preferen
-- General Setup Page --			
Tv Display	Ps	Normal / Ps	
Angle Mark	On	Normal / Lb	
Osd Lang	Eng	Wide	
Captions	Off		
Screen Saver	On		
Hddc	1x		
Last Memory	Off		
Set Tv Display Mode			

General	Audio	Video	Preferen
-- General Setup Page --			
Tv Display	Ps		
Angle Mark	On	On	
Osd Lang	Eng	Off	
Captions	Off		
Screen Saver	On		
Hddc	1x		
Last Memory	Off		
Set Angle Mark			

General	Audio	Video	Preferen
-- General Setup Page --			
Tv Display	Ps	English	
Angle Mark	On	Chinese	
Osd Lang	Eng	French	
Captions	Off	German	
Screen Saver	On	Spanish	
Hddc	1x	Italian	
Last Memory	Off	Portuguese	
		Russia	
Set Osd Language			

General	Audio	Video	Preferen
-- General Setup Page --			
Tv Display	Ps		
Angle Mark	On		
Osd Lang	Eng		
Captions	Off	On	
Screen Saver	On	Off	
Hdcd	1x		
Last Memory	Off		
Closed Caption			

General	Audio	Video	Preferen
-- General Setup Page --			
Tv Display	Ps		
Angle Mark	On		
Osd Lang	Eng		
Captions	Off		
Screen Saver	On	On	
Hdcd	1x	Off	
Last Memory	Off		
Screen Saver			

General	Audio	Video	Preferen
-- General Setup Page --			
Tv Display	Ps		
Angle Mark	On		
Osd Lang	Eng		
Captions	Off		
Screen Saver	On		
Hdcd	1x	Off	
Last Memory	Off	1x	
		2x	
Hdcd			

General	Audio	Video	Preferen
-- General Setup Page --			
Tv Display	Ps		
Angle Mark	On		
Osd Lang	Eng		
Captions	Off		
Screen Saver	On		
Hdcd	1x		
Last Memory	Off	On	
		Off	
Set Last Memory State			

2. Audio setup

General	Audio	Video	Preferen
-- Audio Setup Page --			
Speaker Setup			
Go To Audio Setup Page			




General	Audio	Video	Preferen
-- Speaker Setup Page --			
Downmix	Str	Lt/Rt	
		Stereo	
		V-Surr	
Set Downmix Mode			

3. Video setup





   4. Preference setup

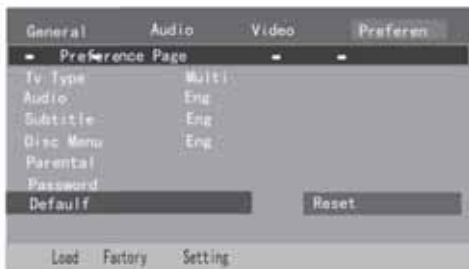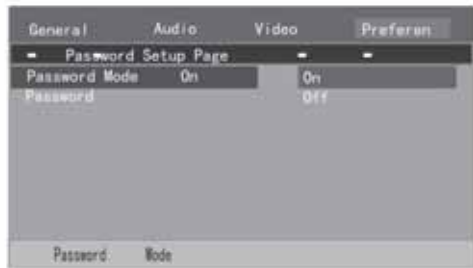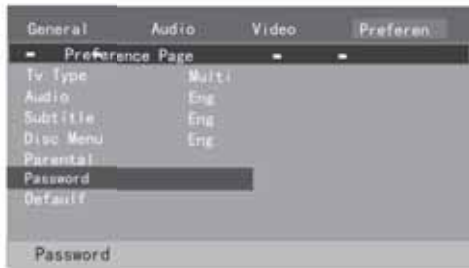



I.USB/SD function

1. At the state of DVD, can switch the function of DVD/USB/SD by  button on the remote control panel (please press stop button when DVD are playing)
2. Press stop button and press  button again then can recover DVD state when playing USB/SD.

J.Attention

1.Disc

- ◆ Wipe a soft lint free cloth
- ◆ Don't touch the playback side of the disc,hold the disc by the edges so that fingerprints will not get on the surface
- ◆ Don't stick paper or tape on the disc
- ◆ Don't expose the disc to direct sunlight or sources of heat
- ◆ After playing, store the disc in its case
- ◆ Before playing a disc, make sure the disc is free from any debris or scratches.
- ◆ Don't use strong solvents such as alcohol, benzene, thinner

2.Special instructions

There may be a few bright or dark spots on the screen when plays

It is a very common phenomenon in active matrix display technology. It does not indicate any fault or problem has appeared

Troubleshooting

Fault	Cause	Solution
No power	+/- electrodes connected in opposite way	Connect red wire to + 12v, black wire to ground
	Faulty fuse	Change with new fuse
No image	No video signal	Check signal cable
	No DVD signal	Re-start player
Remote control does not work properly	Remove protective film before use	Remove the insulating label from the remote controller
	Intermittent functions	Remote has to be have a "line of sight" and can be no further than 6 ft
	Remote not functioning	Replace battery
Distorted Picture	Disc is damaged or scratched	Try another disc
	Remove	Insert disc again correctly

Contents

Description	Q t y
Remote Control	1
Manual	1
Screws	1 bag

Specifications subject to change without notice

**BEFORE OPERATING THE UNIT, PLEASE READ THIS MANUAL
THOROUGHLY AND RETAIN IT FOR FUTURE REFERENCE**

S11.2CBL

**11.2" (284mm) Widescreen Flip-down TFT Monitor
With Built-In DVD Player**



SOUND STORM[®]
L A B O R A T O R I E S

3451 LUNAR COURT, OXNARD CA 93030

PHONE: 888.38.STORM

805.983.8008

FAX: 805.983.7068

TECHNICAL SUPPORT

www.soundstormlab.com



0313