SB10.4FI 10.4 - INCHFLIP - DOWNTFTMONITOR WITH BUILT-IN INFRARED AUDIO TRANSMITTER

3.2010





3451 LUNAR COURT, OXNARD CA 93030 PHONE: 805.983.8008 FAX: 805.983.7068

TECHNICAL SUPPORT: www.soundstormlab.com



User's Manual



SB10.4FI 10.4-INCH FLIP-DOWN TET MONITOR WITH BUILT-IN INFRARED AUDIO TRANSMITTER

Power Requirements	DC 12V
Power Consumption	9W
Screen Size	10.4" TFT-LCD
Screen Format	4:3
Resolution Pixel	1152*234
A/V Inputs	AV1/V2 Inputs
Dimensions	(L)12.5×(W)12.3×(H)2.2inch
IR Power Requirements	DC 12V
IR Power Consumption	3W
IR Transmitter Frequency	Right 2.8MHz Left 2.3MHz
LCD Panel Type	Active Matrix TFT
Compatible video standard	NTSC/PAL auto select


Note : This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

MONITOR OPERATION

USER'S MANUAL

Releasing the Monitor

Push the open button (located on the front edge of the screen housing) and lower the monitor to the desired angle. You can also adjust the swivel angle.

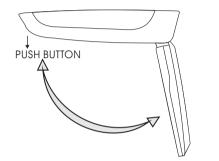




How to use the monitor

Please read this User's Manual in detail and use the set properly.

PRECAUTIONS4
INSTALLATION
FEATURES AND CONTROLS··· ··· ··· ··· ··· ··· ··· ··· ··· ··
A/V AND POWER CONNECTIONS··················8
MONITOR OPERATION
Releasing the Monitor·································9
How to watch the Monitor 9
SPECIFICATIONS


1. Connect the monitor to the external devices.

 2. Press the POWER button on either the remote control or the unit once to turn the power on. Press the same POWER button to turn the power off.



3. Turn on the external devices and view.


PRECAUTIONS

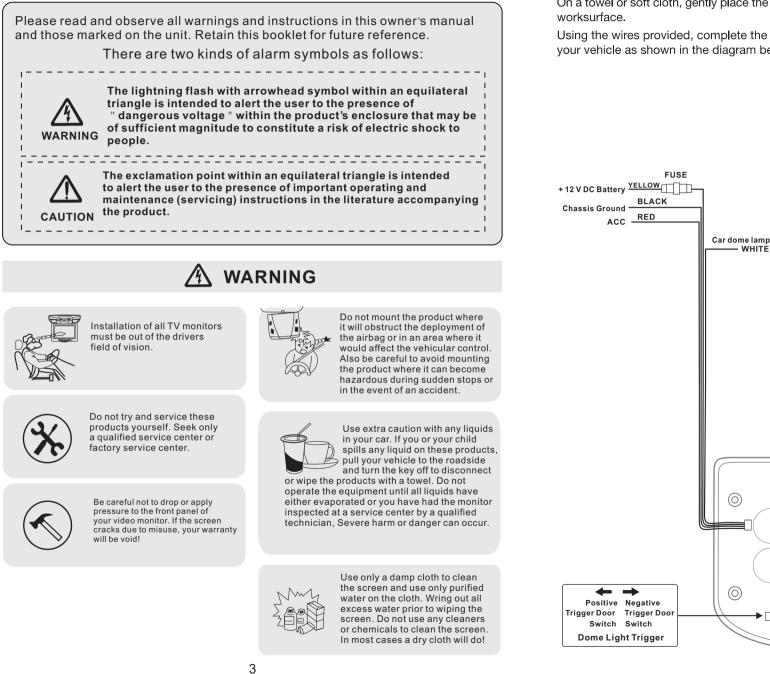

A/V AND POWER CONNECTIONS

On a towel or soft cloth, gently place the monitor assembly "face down" on a stable

Using the wires provided, complete the audio, video and power connections in vour vehicle as shown in the diagram below.

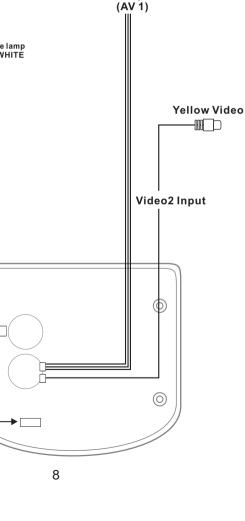

000000

GAME

di C CAMCORDE

White AUDIO(L)


Red AUDIO(R)

Yellow VIDEO,

AV Input

FEATURES AND CONTROLS


PRECAUTIONS

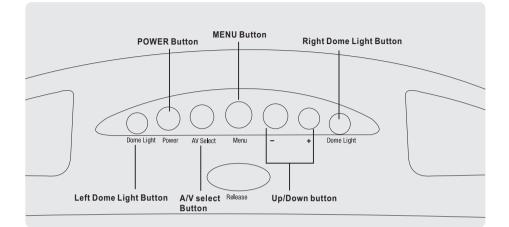

Interface Switch Function

Power: Power ON/OFF

- AV: Signal Select
- Menu: Press this button for OSD menu. And select menu option
 - +: Increase current option value.
 - -: Decrease current option value.

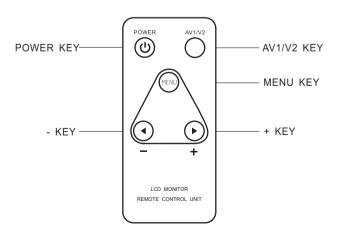



Quality installations are best performed by qualified and certified installers.



∧ CAUTION

Watching the monitor for an extended period of time with the engine turned off may deplete the vehicle's battery.



Don't touch the unit if there is a flash of lightning. It may receive an electric shock.



This product is designed for operation with a 12 Volt DC, negative ground vehicle. It is not suitable for operation under other conditions or voltages.



Do not cover heater ducts or vents. This may cause a fire or an electric shock.

Check Point

1. The operating temperature of this product is limited to $14^{\circ}F \sim 140^{\circ}F$ (- $10^{\circ}C \sim 60^{\circ}C$).

Your vehicle can reach temperatures up to 100°C in the summertime.

2. When your vehicle is extremely hot or cold you must allow time for your air conditioner or heater to cool or heat the vehicle and for operating temperatures to return to normal operating ranges. Your monitor will return to its normal functions when these operating ranges are achieved.


3. Optimum picture quality is achieved when you are directly in front of the monitor (+/-45 degrees).

FEATURES AND CONTROLS

1. Open the packaging and check that these parts are present.



2. Connect the external components to the RCA cable or AV output. (Refer to the connection diagram on page 8)

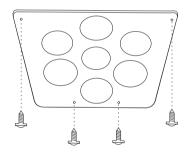

screw B.

3. Match the position of installation bracket and installation plate with screw A.

