

# **SD354**

**IN-DASH DVD/MP3/CD AM/FM RECEIVER  
WITH 3.6-INCH WIDESCREEN TFT MONITOR  
WITH USB AND SD MEMORY CARD PORTS AND FRONT PANEL A/V INPUT**

02.2010



**SOUND STORM**<sup>®</sup>  
L A B O R A T O R I E S

3451 LUNAR COURT, OXNARD CA 93030  
PHONE: 888.38.STORM  
805.983.8008  
FAX: 805.983.7068

TECHNICAL SUPPORT:  
[www.soundstormlab.com](http://www.soundstormlab.com)



10R-021268

iPod is a trademark of Apple, Inc.,  
registered in the U.S. and other countries.

# **User's Manual**





# **SD354**

**IN-DASH DVD/MP3/CD AM/FM RECEIVER  
WITH 3.6-INCH WIDESCREEN TFT MONITOR  
WITH USB AND SD MEMORY CARD PORTS  
AND FRONT PANEL A/V INPUT**

# INSTRUCTION MANUAL

## 3.6" In-Dash DVD/MP3/CD Receiver with USB, SD Memory Card Ports and Front Panel AV Input

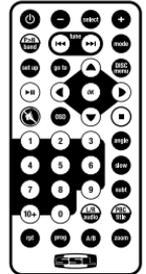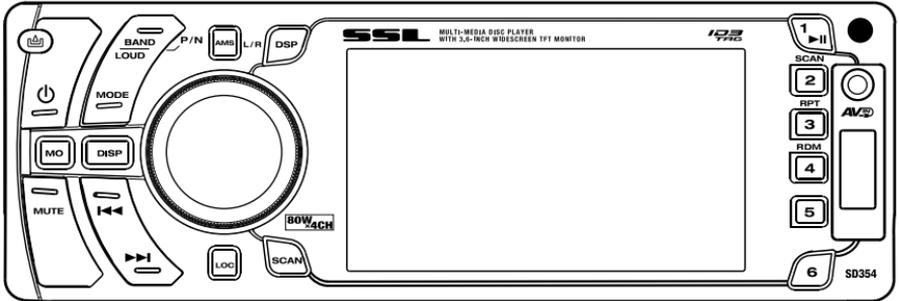

# 1. HANDLING COMPACT DISCS

## MOISTURE CONDENSATION

On a rainy day or in a very damp area, moisture may condense on the lenses inside the unit. Should this occur, the unit will not operate properly. In such a case, remove the disc and wait for about an hour until the moisture has evaporated.

## NOTES ON CDs

1. A dirty or defective disc may cause sound dropouts while playing. To enjoy optimum sound, handle the disc as follows.

Handle the disc by its edge. To keep the disc clean, do not touch the surface (P.1).




2. Do not stick paper or tape on the disc (P.2).



3. Do not expose the discs to direct sunlight or heat sources such as hot air-ducts, or leave them in a car parked in direct sunlight where there can be a considerable rise in temperature inside the car (P.3).



4. Before playing, clean the discs with an optional cleaning cloth. Wipe each disc from the centre out (P.4).

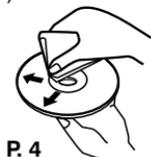

5. Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analog discs.

## NOTES ON DISCS

If you use the discs explained below, the sticky residue can cause the CD to stop spinning and may cause malfunction or ruin your discs.

Do not use CDs that have a sticky residue on the surface (for example, from peeled-off stickers or from ink, or glue leaking from under the stickers).

Paste or sticky residue.



 
Do not use CDs with old labels that are beginning to peel off.

Stickers that are beginning to peel away leave a sticky residue (P.6).



Do not use CDs with labels or stickers attached.

Labels are attached (P.7).



## Do Not Use Special Shape CDs

 
Be sure to use round shape CDs only. Do not use any special shape CDs. Use of special shape CDs may cause the unit to malfunction. (P.8).



CD-Rs and CD-RWs which have not undergone finalization processing cannot be played. (For more information on finalization processing, refer to the manual for your CD-R/CD-RW writing software or CD-R/CD-RW recorder.) Additionally, depending on the recording status, it may prove impossible to play certain CDs recorded on CD-R or CD-RW.

## 2. INSTALLATION

- Before finally installing the unit, connect the wiring temporarily and make sure it is all connected up properly and the unit and system work properly.
- Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.
- Consult with your nearest dealer if installation requires the drilling of holes or other modifications of the vehicle.
- Install the unit where it does not get in the driver's way and cannot injure the passenger if there is a sudden stop, like an emergency stop.
- If installation angle exceeds 30° from horizontal, the unit might not give its optimum performance.



- Avoid installing the unit where it would be subject to high temperature, such as from direct sunlight, or from hot air, from heater, or where it would be subject to dust dirt or excessive vibration.
- Be sure to remove the front panel before installing the unit.




### DIN FRONT/REAR-MOUNT

This unit can be properly installed either from "Front" (conventional DIN Front-mount) or "Rear" (DIN Rear-mount installation, utilizing threaded screw holes at the sides of the unit chassis). For details, refer to the following illustrated installation methods A and B.

#### DIN FRONT-MOUNT (Method A)


##### Installation the unit

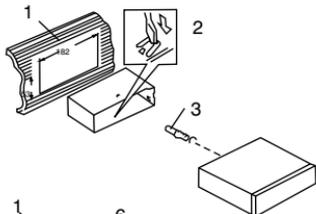

1. Dashboard
2. Holder

After inserting the half sleeve into the dashboard, select the appropriate tab according to the thickness of the dashboard material and bend them inwards to secure the holder in place.

3. Screw

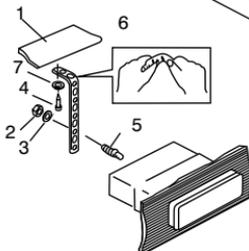


1. Dashboard
2. Nut (5mm)
3. Spring washer
4. Screw (4x12mm)
5. Screw
6. Support Strap

Be sure to use the support strap to secure the back of the unit in place. The strap can be bent by hand to the desired angle.

7. Plain washer

##### Removing the unit

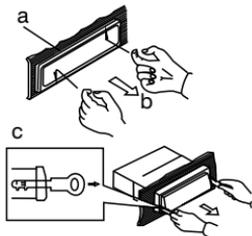

- a. Frame
- b. Insert fingers into the groove in the front of frame and pull out to remove the frame. (When re-attaching the frame, point the side with a groove down wards and attach it.)
- c. Insert the levers supplied with the unit into the grooves at both sides of the unit as shown in figure until they click. Pulling the levers makes it possible to remove the unit from the dashboard.

##### Trim Plate Installation:


Push the trim plate against the chassis until it is fitted.

You must do this before you install the front panel, otherwise it can't be attached.

## DIN REAR-MOUNT (METHOD B)

Installation using the screw holes on the sides of the unit.


Fastening the unit to the factory radio mounting bracket.

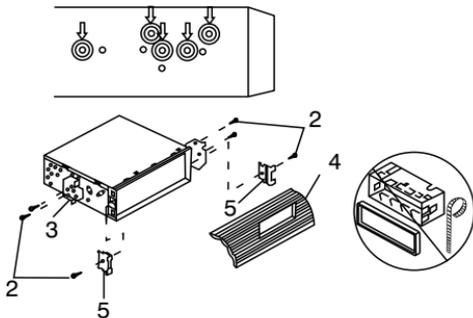


1. Select a position where the screw holes of the bracket and the screw holes of the main unit become aligned (are fitted) and tighten the screws at 2 places on each side.
2. Screw (must not use more than 6mm length)
3. Factory radio mounting bracket.
4. Dashboard or Console
5. Hook (Remove this part)

**Note:** the mounting box, outer trim ring, and half-sleeve are not used for method B installation.

## PANEL OPEN/CLOSE OPERATION

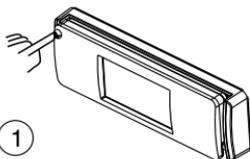

1

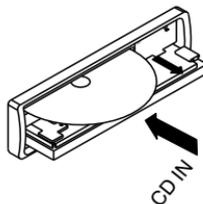


2

1. Press Open button
2. The CD slot will be accessible.
3. After CD is loaded or unloaded return the panel to its original position.


### 3. DETACHABLE CONTROL PANEL (D.C.P)

#### Attaching the Detachable Control panel (D.C.P)

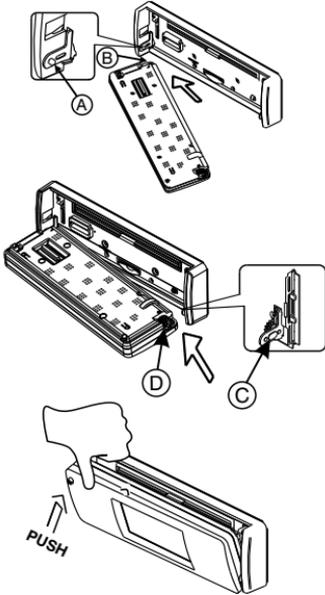

1. Attach the panel at the Left side first, with point B on the main unit touching point A on the D.C.P (As shown on the diagram).
2. And then also attach the panel at the right side , with point C on the main unit touching point D on the D.C.P as well (As shown on the diagram)
3. Then press the left side of D.C.P onto the main unit until a “click” sound is heard.


#### Removing The Detachable Control Panel (D.C.P).

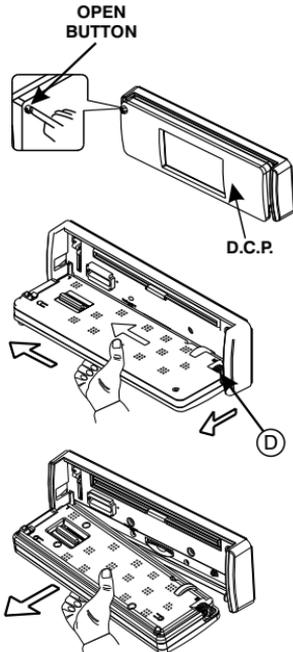

1. Turn the power off.
2. Press the panel open button, the D.C.P will be fold down.
3. Push hard the D.C.P in the left direction until the point D at the right side of D.C.P is came off the main unit (As shown on the diagram).
3. Remove the D.C.P

## CAUTION

- DO NOT insert the D.C.P from the right side. Doing so may damage it.
- The D.C.P can easily be damaged by shocks. After removing it, place it in a protective case and be careful not to drop it or subject it to strong shocks.
- When the open button is pressed and the D.C.P is unlocked, the car's vibrations may cause it to fall. To prevent damage to the D.C.P, always store it in a protective case after detaching it.
- The rear connector that connects the main unit and the D.C.P is an extremely important part. Be careful not to damage it by pressing on it with fingernails, pens, screwdrivers, etc.

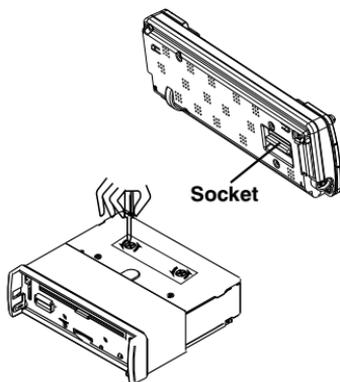

## Note:

If the D.C.P is dirty, wipe off the dirt with soft, dry cloth only. And use a cotton swab soaked in isopropyl alcohol to clean the socket on the back of the D.C.P.

## 4. ELECTRICAL CONNECTION


- Make sure your car battery is a 12 volt (6 filler caps) negative ground system (if not, a converter will be necessary).
- Before starting wiring connections, disconnect the power supply by removing the fuse from the fuse box.
- Connect the power wire to one of the extra terminals of the fuse box.
- Connect the black ground wire to a metal part of the car. It is important to make good contact.
- Make other wiring connections as shown.
- If your car does not have ISO connector, you can purchase it from car accessory shops.

**Notes:** INCORRECT WIRING OR OPERATION WILL VOID THE WARRANTY OF THIS UNIT.



### Fuse Replacement:

To replace the fuse, pull out the blown fuse from the socket. Insert a new one with same rating

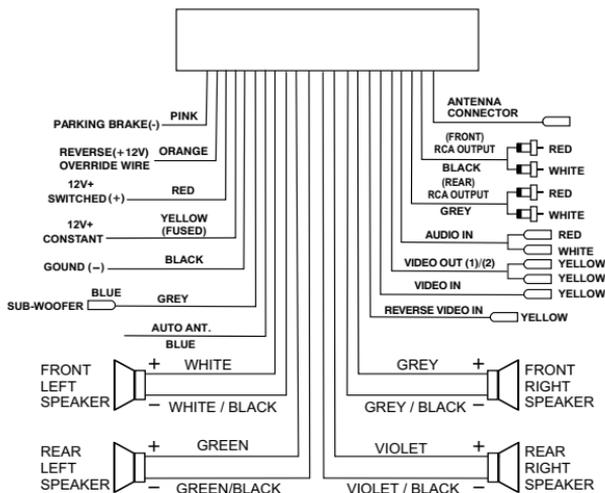

### RESET BUTTON

The RESET button is located on the main unit (as shown on the diagram). Press it vertically with a ballpoint pen or metal object to activate it. The reset button should be activated for the following reasons:



- Initial installation of the unit when all wiring is completed.
- All the function buttons do not operate.
- Error symbol on the display.




**Note:** If you press the RESET button, and the unit still cannot function normally, please use a cotton swab soaked in isopropyl alcohol to clean the socket on the back of the control panel.

# 5. FUNCTION OF CONTROL

## A. FUNCTION OF PANEL

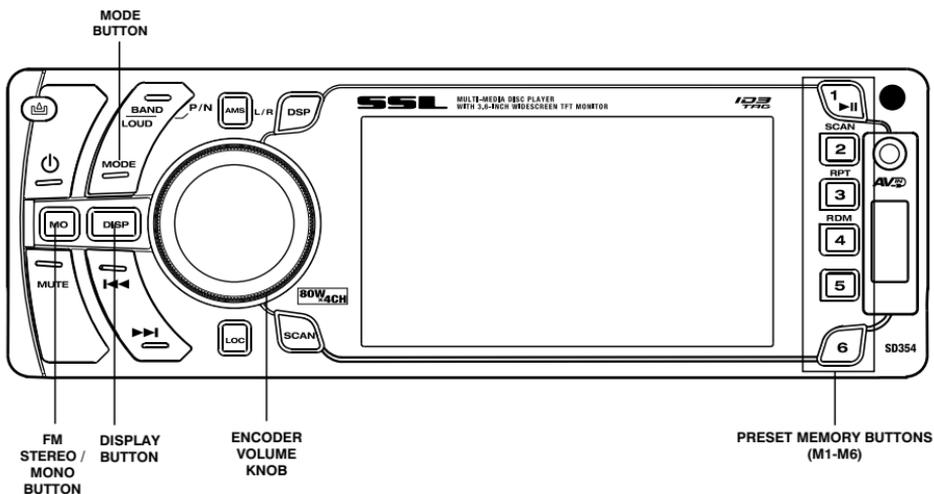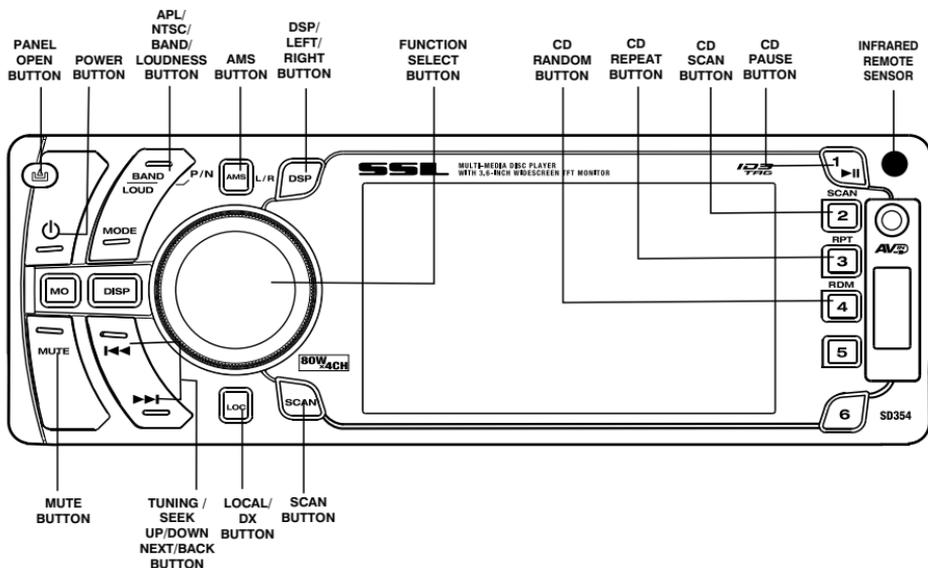

## B. FUNCTION OF REMOTE

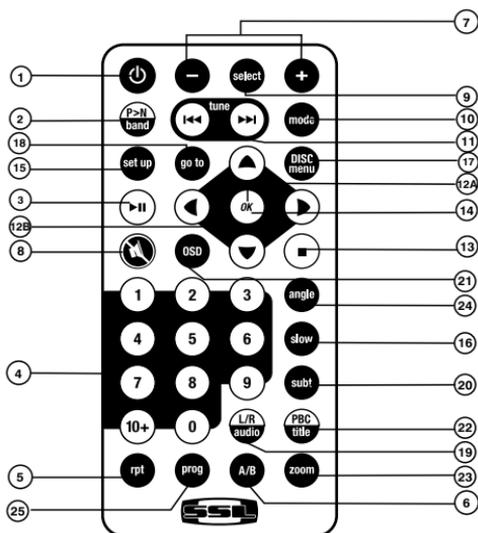

1. POWER BUTTON
2. PAL / NTSC /BAND BUTTON
3. PLAY / PAUSE BUTTON
4. NUMERIC BUTTONS
5. REPEAT BUTTON
6. REPEAT A - B BUTTON
7. VOLUME UP / DOWN BUTTONS
8. MUTE BUTTON
9. FUNCTION SELECT BUTTON
10. MODE BUTTON
11. TUNING/SEEK/UP/DOWN OR NEXT/BACK BUTTONS
- 12A. LEFT/RIGHT BUTTONS
- 12B. UP/DOWN BUTTONS
13. STOP BUTTON
14. OK BUTTON
15. SET UP BUTTON
16. SLOW BUTTON
17. DISC MENU BUTTON
18. GOTO BUTTON
19. L/R AUDIO BUTTON
20. SUBTITLE BUTTON
21. OSD BUTTON
22. PBC /TITLE BUTTON
23. ZOOM BUTTON
24. ANGLE BUTTON
25. PROGRAM BUTTON

## 6. BASIC OPERATION

### PANEL RELEASE BUTTON

Press this button to remove the control panel.

### POWER BUTTON

Press power button to turn on/off the unit.

### DISPLAY BUTTON(DISP)

Press this button briefly, the LCD will display the clock for about 5 seconds, then return to previous display mode.

#### Clock Adjustment

Under clock display mode, press DISP button until the LCD flashes, USE VOLUME UP/DOWN to Adjust hour & minute, press sel button to change the hour & minute.

### MUTE BUTTON ( MUTE)

Press MUTE button to mute the sound quickly. the display is flashing Press it again to restore the previous sound level. When mute is on, the Mute indicator on the LCD will light up.

### LOUDNESS BUTTON (LOUD)


Long press this LOUD button control to increase bass output.

### MODE BUTTON (MODE)

Press this button to select radio, DISC/TV(OPTIONAL)/USB/SD/MMC/A/V-IN FRONT/A/V-IN Rear.

### FRONT PANEL A/V IN JACK

The unit is allowed to connect the with external Audio / Video system such like Digital Camera or Game Console. You can connect the external A/V system thru the A/V in jack on front panel. After connect with external A/V system, pressing mode to "A/V IN FRONT" to enjoy this external A/V system on this unit.

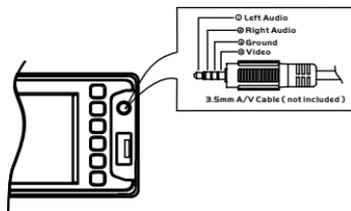

NOTE: The unit is only support the 3.5mm A/V Jack Pin Assignment shown as the diagram delete extra "."

### SELECT BUTTON (SEL)

press SEL button for less than 1 second to open the Audio menu.

press SEL repeatedly to navigate through the following functions:

VOLUME (VOL) -> BASS (BAS) -> TREBLE (TRE) -> BALANCE (BAL) -> FADER (FAD)-> SUB-WOOFER(SUB-W)(OPTIONEL)

Press Volume Up/Down to adjust desired level within 5 seconds.

NOTE: BASS AND TREBLE WILL BE SKIPPED IF DSP MODE IS ACTIVATED

### ENCODER VOLUME KNOB

Turn this knob to adjust desired volume level.

### PRESET EQUALIZER BUTTON (DSP)

Press this PEQ button then use V-UP / V-DN to toggle the following EQ settings.

POP -> ROCK -> CLASSIC -> DSP OFF

At DSP off mode preset equalizer will be controlled by Bass / Treble setting.

## 7. RADIO OPERATION

### FM MONO / STEREO BUTTON (MONO)

Use this control to select stereo or mono reception for FM radio stations. You can sometimes improve reception of distant stations by selecting mono mode.

### LOCAL / DX BUTTON (LOC)

This control can be used to change between Local and Distant (-DX) tuning mode. Local mode improves reception in some areas where the signal is too strong.

### STATION PRESET BUTTONS (M1-M6)

You can store & recall six preset radio stations by pressing M1-M6 buttons

TO STORE A STATION: 1) select a band (if needed)

2) select a station by tuning up / down button

3) hold a preset button which you want store the station for at least 2 seconds. The preset number will appear on the display accompanied by a beeps sound.

TO RECALL A STATION: 1) select a band (if needed)

2) press a preset button briefly to recall the stored station.

### SCAN BUTTON (SCAN)

Press this button, the radio will tune up to search stations, the available stations will blinking and stay on the display for a few seconds.

### AUTO MEMORY STORE / PRESET SCAN BUTTON (AMS)

PRESET SCAN: press **AMS** button for less than 1 second to scan all preset stations in the memories of the current band and stay on each memory stations for about 5 seconds. The memory location indicator on the LCD will flash during the process. To stop preset scan, press AMS button again.

AUTO MEMORY STORE: press **AMS** button for more than 1 second to enter auto store mode. The radio will automatically store 6 stations to the 6 preset memories of the current band. To stop auto store, press **AMS** button again.

### BAND BUTTON (BAND)


Press this button to change between band FM1, FM2, FM3 or MW(AM)1, MW(AM)2 bands .

### TUNING UP / DOWN BUTTON (▶▶◀◀)

Press this button to search for radio stations. Depends on whether SEEK1 or SEEK 2 mode is selected, different operations can be performed, refer to "SEEK MODE" paragraph for detail.

### DUAL FREQUENCY SWITCH

Unit is defaulted in U.S.A. Frequency, if EURO frequency is required, a sharp pen is needed to switch the button on the left side of the chassis to EURO frequency.

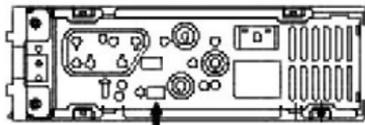


## 8. CD/MULTI-MEDIA FILE

### LOADING THE CD

Press the Panel Open Button to fold down the front panel, insert the disc through CD slot, the disc will be automatically loaded and playback will also start.

### CD EJECT BUTTON

Press this button to eject the CD. Since this button is located behind the front panel, fold down the panel before accessing this button.

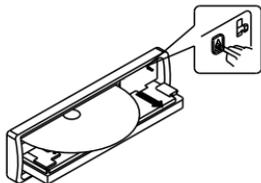

### PLAY/PAUSE BUTTON ( ▶|| )

Press this button briefly to pause disc play, press again to resume play.

### INTRO SCAN BUTTON (CD SCAN)

Press this button to select Intro Scan function, the first 10 seconds of each track will be played sequentially until this button is pressed again, then normal play will resume at the current track.

**NOTE:** This will only operate with the **SCAN** function play on CD.

### REPEAT BUTTON(RPT)

Pressing this button will activate Repeat Function in the following order :

Repeat On → Repeat Off

The RPT indicator will turn on.

### RANDOM PLAY BUTTON(RDM)

When random play mode is selected, the tracks will be played in random order, press this key one more time to cancel random play mode.

### NEXT/BACK BUTTONS( ▶| & |◀ )

When **NEXT** is pressed, the unit will go to the next track and start the playback.

When **BACK** is pressed, the unit will go back to the previous track and start the playback.

Long press the ▶|&|◀ buttons under the play mode, the unit will start to forward or rewind. you can play discs at various speeds. with each consecutive long press the ▶|&|◀ buttons , the playback speed increases. there are 5 speed levels for discs in FWD/REV: X2, X4, X8, X16,X20. there are 4 speed levels for disc types other than disc: X2, X4, X8,X16.

Press **PLAY** to resume the playback at normal speed.

## MULTI-MEDIA FILE OR FOLDER SEARCHING

 
### Selecting a Track to Play

1. Use the UP/DOWN/LEFT/RIGHT direction buttons to move to different file/folder Numbers.
2. Press OK on a file number, and that file will begin to play, or by direct numeric input,
3. Enter a file number with the numeric buttons (0-9) and +10 button to play the input Files Number.

### REPEAT A-B BUTTON (A-B)

1. Press REPEAT A-B at your chosen starting point.
2. Press REPEAT A-B again at your chosen end point.
  - The section A and B can be set only within the same track.
  - The section will now repeat continuously.
3. To exit the sequence, press REPEAT A-B.

The screen will display the following message:



**NOTE:**This operate is with CD function only.

### STOP BUTTON (■)

Stop the current disc playback. Briefly press the STOP button to stop the unit playback, when the PLAY button is pressed, normal playback will continue.

Press STOP two times consecutively to enter the clear stop mode. Under the clear stop mode, if PLAY is pressed, the disc will resume the playback from the beginning of the disc.

### NUMERIC BUTTONS

When playback CD/MUSIC use for track number or File number direct access and Use when function need numeric Selection or Input, like in the Goto function, etc.

### UP/DOWN/LEFT/RIGHT BUTTON (▲ / ▼ / ◀ / ▶)

Use to move cursor up/down/left/right.

### OK BUTTON

Use this button to confirm the selection.

### GO TO BUTTON (GO TO)

Using GO TO feature to select track number or specific time.

- A. Press GO TO button, the screen will display the following message:



- B. Press Arrow Left/Right buttons to highlight the track number or the time option.
- C. Use numeric buttons to enter the track you want to play or the elapsed time you want to go to in that track.
- D. Press OK button to start playback. For example, entering 00:01:56 will start playback one minutes and fifty-six seconds into the title.

## PROGRAM BUTTON (PROG)

Press PROG button the screen will display the following message.

PROG			
1 0002	5 ----	9 ----	13 ----
2 0004	6 ----	10 ----	14 ----
3 ----	7 ----	11 ----	15 ----
4 ----	8 ----	12 ----	16 ----
	PLAY	CLEAR	


- A. For example: Press numeric button 2, PROGRAM 0002 appears it means track 2 will be player first then press numeric button 4 and PROGRAM 0004 appears, press the different numeric button to select the corresponding track and then you can program tracks to your need if you want to complete program setting press PLAY button to play tracks in programmed order.
- B. Press the (▲/▼/◀ / ▶) buttons to highlight select program mode or track number and press PLAY button to confirm it.
- C. If you exit program mode and program off appears press STOP button then press PLAY button.

## ID3 INFORMATION DISPLAY

If any MUSIC file contains any ID3-TAG information, user can view these ID3-TAG information such as Track title, Artist title, Album title, etc, These ID3-TAG information will be displayed on the lower left hand corner of the TFT monitor.

## 9. PLAY MULTI-MEDIA FILES OPERATION

Place a disc into the player, and the player will auto search the directories saved files. After searching, it will auto go to the first directory saved files (to the disc containing both Music and photo files; To the disc containing single type of files, it will automatically go to the first directory) and play the first song in the directory ("01:" is highlighted). The screen displays as the picture below:

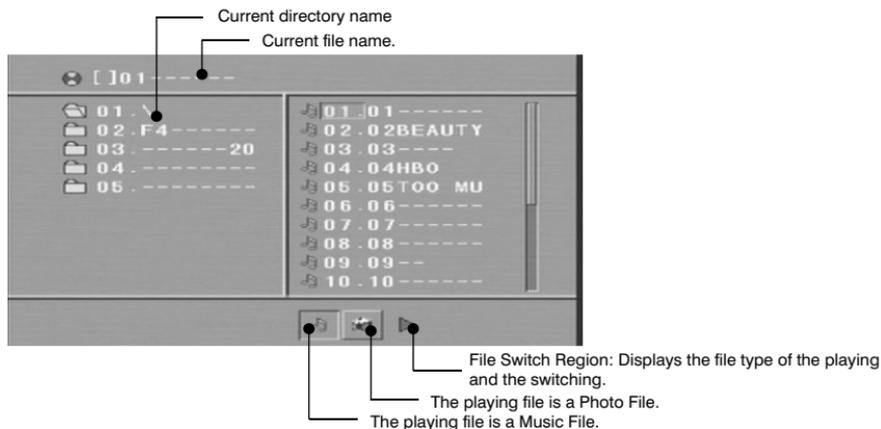

Use the Arrow (▲/▼/◀/▶) buttons to enter the Directory Region and highlight the desired directory, then the first track under it starts playback; Also you can use the Arrow (▲/▼/◀/▶) buttons to enter the File Region and select the file you want to play.

- NOTE:**
- Press the Left and Right arrow buttons, you can activate Directory Region, File Region and File Switch Region separately.
  - The highlight in Directory Region and File Region is shown as the picture above; While it appears a transparent rectangle in File Switch Region. You can press the Numeric buttons to select the file you want to play. For example, if you desire the 15<sup>th</sup> track in current list, press the "10+" button once, then press "5", the 15<sup>th</sup> starts playback.

**NOTE:** When a picture is playing or paused, press the Arrow buttons to change the display angle:

# 10. MMC/SD CARD & USB DEVICE OPERATIONS

## START THE USB DEVICE MODE



1.The USB socket is accessible as indicated in picture 1.(P.1)

2.Plug in the USB drive / device completely as indicated in picture 2(P.2) and display will show "USB" to indicate that the USB drive / device is being plugged in correctly & the download has begun.

3.Does not matter what mode the unit is in, once a USB drive / device is being plugged into the unit, the unit will automatically switch to USB mode.

4.All the USB files playback function is same as normal disc playback.

**Warning:** Excessive weight or size USB drive/device may cause permanent & serious damage to the unit and may cause access to the buttons on the front panel impossible. User must use an extension cable (provide by USB device manufacturer) to connect with USB socket to prevent any damage cause.

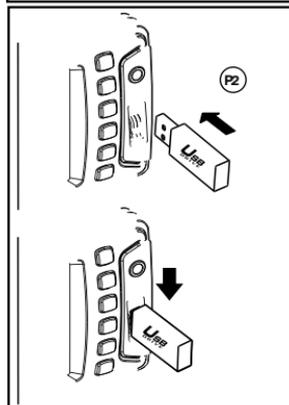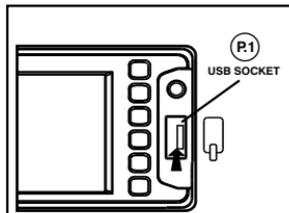

## TO STOP USB PLAYBACK

1.If the USB drive / device is unplugged, the unit will automatically switch to radio mode. Or the user can use the mode button to switch to other modes.


2.The user can use the mode button to choose USB mode (only if USB drive / device is inserted in the unit ) or any other modes, when they are in any mode.

### USB SPECIFICATION

- \* SUPPORT MAX 1G USB FLASH MEMORY
- \* SUPPORT MAX 999 SONGS
- \* USB 1.1 DEVICE SUPPORT
- \* USB 2.0 DEVICE SUPPORT  
(TRANSFER SPEED SAME AS VER 1.1)
- \* FILE MANAGER: FAT12/FAT16/FAT32

## CAUTION


1.Always unplugged the USB gently from the unit, excessive force used will cause permanent & serious damage to the unit & the USB drive / device.

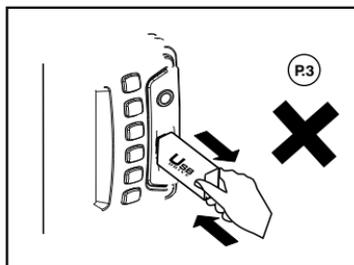


## COMPATIBILITY

Due to the fast changing technology world, this unit may or may not be compatible to all the USB drive / device available with all the future technology, especially those USB drive / device which require to install a driver. Always choose a compatible USB drive / device which is compatible with this unit.


## START THE SD/MMC MODE

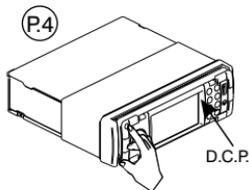

1. Press the panel open button, the D.C.P will drop down.
2. Push the D.C.P in the left direction until the point D at the right side of D.C.P disconnects from the DCP (As shown on the diagram).

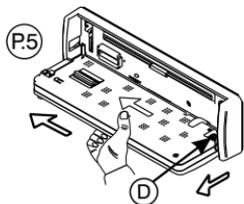

3. The SD/MMC card slot is located on top of the front panel as indicated in (P6).
4. Insert the SD/MMC card into the card slot in the correct direction until a "CLICK" sound is heard.
5. Close the front panel.
6. The display will show "CARD" to indicate that the SD or MMC card is correctly inserted. Once the SD or MMC card is inserted, the file will automatically loaded & playback will also start.

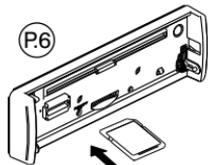

7. Does not matter what mode the unit is in, once the SD or MMC card is being inserted in the unit, unit will automatically switch to SD / MMC mode.
8. All the SD / MMC files playback function is same as normal CD or Multi-Media disc playback.

## TO STOP SD/MMC CARD PLAYBACK

1. Push on the end of the SD or MMC card to eject the SD or MMC card. Once the SD or MMC card is taken out, the unit will automatically switch to previous mode.
2. User can use the mode button to choose SD / MMC mode (only if SD or MMC is inserted in the unit ) or any other modes, when they are in any mode.


### SD/MMC SPECIFICATION

\* SUPPORT MAX 4G SD/MMC CARD

\* SUPPORT MAX 999 SONGS

## CAUTION

2. Please make sure to insert the SD or MMC card in the correct direction and position as indicated in picture 7(P.7). Wrong insert will cause permanent & serious damage to the unit & the SD or MMC card.

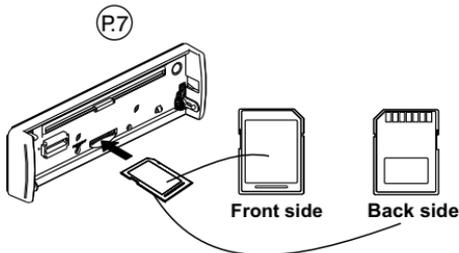

# 11. VIDEO DISC OPERATIONS

## PLAY BUTTON ( ▶|| )

Press this button briefly to pause disc play, press again to resume play.

## STOP BUTTON ( ■ )

Stop the current disc playback.

Briefly press the STOP button to stop the unit playback, when the PLAY button is pressed, normal playback will continue.

Press STOP two times consecutively to enter the clear stop mode. Under the clear stop mode, if PLAY is pressed, the disc will resume the playback from the beginning of the disc.

## UP/DOWN/LEFT/RIGHT BUTTON ( ▲ / ▼ / ◀ / ▶ )

Use to move cursor up/down/left/right.

## OK BUTTON

Use this button to confirm the selection.

## NEXT/BACK BUTTONS ( ▶▶ & ◀◀ )

When NEXT is pressed, the unit will go to the next track and start the playback.

When BACK is pressed, the unit will go back to the previous track and start the playback.

Long press the ▶▶ & ◀◀ buttons under the play mode, the unit will start to forward or rewind. you can play discs at various speeds. with each consecutive long press the of ▶▶ & ◀◀ buttons, the playback speed increases. there are 5 speed levels for discs in FWD/REV: X2, X4, X8, X16, X20. there are 4 speed levels for disc types other than disc: X2, X4, X8, X16.

Press PLAY to resume the playback at normal speed.

## NUMERIC BUTTONS

Use when playback Disc which need numeric Selection or Input, like in the Goto function, etc

## PAL/NTSC BUTTON (P/N)

In order to achieve the best image display effect, you must adjust the player signal system to match your TV set.

- 3 types of TV color signal system are available: NTSC, PAL60 or Automatic mode.
- Use P/N button to select between NTSC/PAL, or automatic mode.

## REPEAT A-B BUTTON (A-B)

1. Press REPEAT A-B at your chosen starting point.
2. Press REPEAT A-B again at your chosen end point.

- The section A and B can be set only within the same track/chapter.
- The section will now repeat continuously.

3. To exit the sequence, press REPEAT A-B.

The screen will display the following message:

▶ REPEAT A → REPEAT A-B → REPEAT A-B CANCEL ◀

## L/R BUTTON (L/R)

Press R/L button for select left and right channel.

The screen will display the following message:

▶ STEREO → MONO L → MONO R ◀

## ZOOM BUTTON(ZOOM)

The ZOOM feature allows you to magnify a certain area of the images recorded on the Video disc and other image discs. the screen will display the following message:

→ ZOOM X2 → ZOOM X3 → ZOOM X4 → ZOOM OFF →

- A. Press ZOOM button to enlarge the image by X2.
- B. Press ZOOM button twice times to enlarge the image by X3.
- C. Press ZOOM button again to enlarge the image by X4.
- D. Press UP/Down/Left/Right to select the area you want to magnify.
- E. The fourtimes press of ZOOM will cancel the zoom function and resume normal playback.

## SLOW BUTTON (SLOW)

- A. Press "SLOW" button once to activate SLOW 1/2 slow motion playback.
- B. Press "SLOW" button twice to activate SLOW 1/3 slow motion playback.
- C. Press "SLOW" button three times to activate SLOW 1/4 slow motion playback.
- D. Press "SLOW" button four times to activate SLOW 1/5 slow motion playback.
- E. Press "SLOW" button five times to activate SLOW 1/6 slow motion playback.
- F. Press "SLOW" button six times to activate SLOW 1/7 slow motion playback.
- G. Press "SLOW" button again to restore normal playback.

The screen will display the following message:

→ SF1/2 → SF1/3 → SF1/4 → SF1/5 → SF1/6 → SF1/7 → PLAY ▶ →

## PBC FUNCTION BUTTON (PBC)

Pressing the "PBC" button to turn on PBC function. The unit will show the song list on the screen of the monitor after the WARNING from the Video CD. Then you can choose the song by pressing the desired number key.

Press PBC key return to manual of Video CD.

**NOTE:**This only operates with the PBC function on VCD.

## GO TO BUTTON (GO TO)

Using GO TO feature to select track number or specific time:

TT 01/05 CH 011/018 ⏪ 01:11:56

- A. Press GOTO button, the screen will display the following message:
- B. Press Arrow Left/Right buttons to highlight the track/title/chapter number or the time Option.
- C. Use numeric buttons to enter the track/title/chapter you want to play or the elapsed time you want to go to in that track/title/chapter.
- D. Press OK button to start playback. For example entering 01:11:56 will start playback one hour, eleven minutes and fifty-six seconds into the title.

## PROGRAM BUTTON (PROG)

The PROGRAM feature, select TITLE/CHAPTER to edit.

- A. Use numeric buttons to enter highlight PROGRAM title/chapter, for example: press numeric button title 2, chapter 4, PROGRAM T02/C04 appears it means Title 2, chapter 4 will be played first then press numeric button title 3, chapter 5 and PROGRAM T03/C05 appears, press the different numeric button to select the corresponding title/chapter and then you can program title/chapter to your need. if you want to complete program setting press PLAY button to play chapters in programmed order.

See the illustration below:

PROG		T	C	T	C	T	C	T	C
1	02:04	5	--:--	9	--:--	13	--:--		
2	03:05	6	--:--	10	--:--	14	--:--		
3	--:--	7	--:--	11	--:--	15	--:--		
4	--:--	8	--:--	12	--:--	16	--:--		
		PLAY				CLEAR			

- B. Press the (▲ / ▼ / ◀ / ▶) buttons to highlight select program mode or title/chapter and press PLAY button to confirm it.
- C. If you exit program mode and program off appears press STOP button then press PLAY button.

## TITLE BUTTON (TITLE)

1. Press TITLE to invoke Title Menu (Dependent on authoring of disc).
2. Press direction (▲ / ▼ / ◀ / ▶) buttons to highlight selected Title Menu entry.
3. Press OK or PLAY to select the highlighted entry. If the highlighted entry indicates a title, that title will play from Chapter 1.

**NOTE:** This only operate if the disc with the **TITLE** function.

## DISC MENU

1. Press DISC MENU to invoke the menu screen included on the disc.
2. Press direction buttons to highlight a selected menu entry.
3. Press OK or PLAY to select the highlighted entry. If the highlighted entry indicates a chapter or title, the disc will play from the selected spot.

## SUBTITLE BUTTON (SUBTITLE)

1. Press SUBTITLE button to bring up the subtitle information which will be shown on the top right corner of the screen.
2. Each time you press SUBTITLE, you can switch to another subtitle available in the disc.

**NOTE:** This only operate with the **SUBTITLE** function play on DISC.

## ANGLE BUTTON (ANGLE)

Press ANGLE button to bring up the angle information which will be shown on the top right corner of the screen.

Each time you press **ANGLE**, you can switch to another camera angle available in the disc.

**NOTE:** This only operate with the **ANGLE** function play on DISC.


## OSD BUTTON

1. Press OSD button to display the amount of time played and time remaining to be played on the disc.
2. Press OSD button once to additionally display the disc type, current chapter or track, and total number of chapters or tracks.  
Also displayed is the current title, total number of titles.  
Press OSD button a second time to additionally display the disc type, Audio language/type/# of channels, subtitle language, and angle selection.
3. Press OSD button a third time to make the OSD disappear.


## 12. SET UP MENU OPERATION

### General Steps of Setup Menu


- 1) Press the Setup button, the main setup menu appears.
  - When the main menu displayed, the Video system will auto pause.

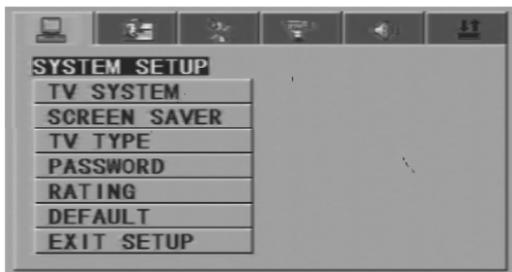

- 2) Press the Left and Right arrow buttons to highlight the icon of the desired page, then press the Down or Right arrow button to activate that page; For example, if you want to setup the video page, press Right to highlight the video icon, the video page will be displayed on the screen.

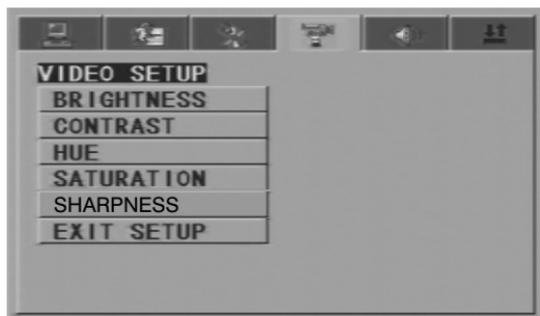

- 3) Press the Down arrow button to highlight the desired option. Press ok or press Right to select, the choices of that option appear on the right; For example, press the Down arrow button to highlight the BRIGHTNESS option, then press ok to select, the brightness choices appear on the right.

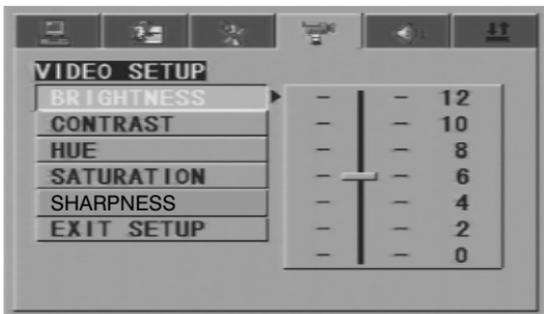


- 4) Press the Arrow buttons to highlight the Exit Setup option, then press Enter or Setup again to exit Setup Menu.

**NOTE:** When setup, the pressing setup buttons will turn off the setup menu, while the choices that have been changed will be saved.

## Setup Items Introduction

### 1) SYSTEM SETUP

The system setup options are illustrated below:

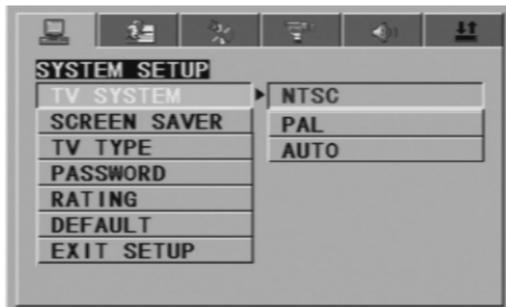

#### TV SYSTEM

According to the Color System of the TV, you can choose the TV System.

1. NTSC: Choose this settings if your Multi-Media player is connected to a NTSC TV.
2. PAL: Choose this settings if your Multi-Media player is connected to a PAL TV.
3. AUTO: Choose this settings if your Multi-Media player is connected to a multi-system TV.

The default setting is AUTO.

#### SCREEN SAVER

If the screen saver is on, when your Multi-Media player is in Stop, Open, or No Disc state, or there is a frame frozen for more than 30 minute, the screen saver will be displayed. This feature can protect the screen from damage.

- ON: Choose this setting to activate the screen saver.
- OFF: Choose this setting to cancel the screen saver

The default setting is ON.

## TV TYPE

- 16 : 9 (Wide Screen): Choose this setting if your Multi-Media player is connected to a wide screen TV. If you choose this setting and you don't have a wide screen TV, the images on the screen may appear distorted due to vertical compression.
- 4 : 3 LB (Letter Box): Choosing this setting if your Multi-Media player is connected to a normal ratio TV. You'll see the movies in their original aspect ratio (height-to-width ratio). You'll see the entire frame of the movie, but it will take up a smaller portion of the screen vertically. The movie might appear with black bars at the top and bottom of the screen.
- 4 : 3 PS (Pan & Scan): Choosing this setting if your Multi-Media player is connected to a normal ratio TV. You can fill the movie to the entire screen of your TV. This might mean that parts of the picture (the left and right edges) won't be seen.

- NOTE:**
- The image display ratio is related to the recorded disc format. Some disc can not display images in the aspect ratio you choose.
  - If you play a disc recorded in 4:3 format on a wide screen TV, black bars will appear on the left and right side of the screen.
  - You must adjust the screen setting depending on the type of the television you have.

## PASSWORD

The password option is initialized locked, and you cannot set the ratings limit or change the password. In order for the Ratings feature work, the password mode must be turned on. If you want to set the ratings limit, you will need to enter the default password, which is 0000, then press ok to confirm. To change the password, you will be prompted for the old password, then be prompted for a new. Enter a 4-digit number (this is your password).

## RATING

The Rating feature is a rating limit system, like movie ratings. It works with discs that have been assigned a rating. This helps you control the types of Discs that your family watches.

- There are eight rating options: 1. KID SAFE, 2. G, 3. PG, 4. PG-13, 5. PG-Q, 6. R, 7. NC-17, 8. ADULT.
- Select the ADULT option to cancel the rating limit.

The default setting is ADULT.

- NOTE:** If the password option is locked, you cannot set the ratings limit; the rating limit does not work when the password option is unlocked.

## DEFAULT

Choose this option to resume all the setup options to default settings. You may need to power off and on after reset.

## 2). LANGUAGE SETUP

The language setup options are illustrated below:



## OSD LANGUAGE

- Highlight the OSD LANGUAGE option, and press the Arrow buttons to choose the OSD language you prefer. Press Enter to confirm, and it will display OSD in that language.

## AUDIO LANG

- Highlight the AUDIO LANG option, and press the Arrow buttons to choose the audio language you prefer. Press Enter to confirm. If the disc you are playing has that language available, it will output audio in that language.

## SUBTITLE LANG

- Highlight the SUBTITLE LANG option, and press the Arrow buttons to choose the subtitle language you prefer. Press ok to confirm. If the disc you are playing has that language available, it will displays subtitles in that language.


## MENU LANG

- Highlight the MENU LANG option, and press the Arrow buttons to choose the menu language you prefer. Press ok to confirm. If the disc you are playing has that language available, it will displays menu in that language.

**NOTE:** If your preferred language isn't available, the disc's default language will be played.  
The default language of your Multi-Media player is English.

## 3).VIDEO SETUP

The video setup options are illustrated below:

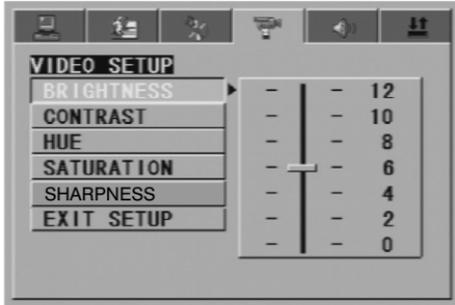

### BRIGHTNESS

- Use the Up and Down arrow button to move the scroll and adjust the brightness.

### CONTRAST

- Use the Up and Down arrow button to move the scroll and adjust the contrast.

### HUE

- Use the Up and Down arrow button to move the scroll and adjust the hue.

### SATURATION

- Use the Up and Down arrow button to move the scroll and adjust the saturation.

### SHARPNESS

- Use the Up and Down arrow button to move the scroll and adjust the sharpness.

## 13. SPECIFICATIONS

### CD PLAYER

System	Compact disc audio system
Usable disc	Compact disc, CD-R, CD-RW
Sampling frequency	44.1KHz
No of quantization bits	1bit
Frequency	5-20,000Hz
Number of channels	2 stereo
S/N Ration	70dB

### RADIO SECTION

#### FM

Frequency Range	87.5 -107.9 MHz (USA) 87.5 -108 MHz (EURO)
Intermediate Frequency	10.7 MHz
Usable Sensitivity	Better than 15dB at S/N 30 dB
Stereo Separation	25 dB at 1KHz
S/N Ratio	50 dB

#### AM (MW)

Frequency Range	530 -1710 KHz (USA) 522 -1620 KHz (EURO)
Intermediate Frequency	450KHz
Usable Sensitivity	Better than 45dB
S/N Ratio	40 dB

### GENERAL

Power Supply	DC 11 -14V
Polarity	Negative Ground
Speaker impedance	4 ohms
Power Output	80W x 4

### REMARK :

**Specifications subject to change without notice.**