


TEL: 805.983.8008
3451 LUNAR COURT
OXNARD, CA 93030
WWW.SOUNDSTORMLAB.COM

SOUND STORM
LABORATORIES

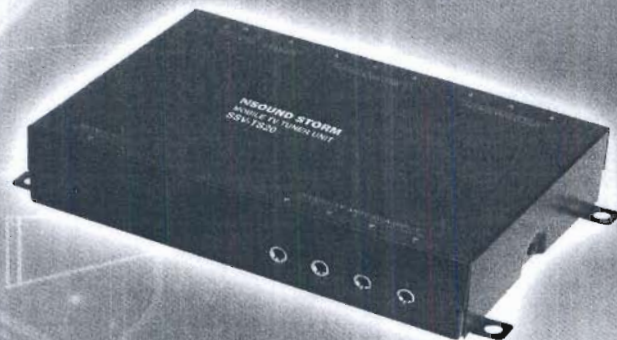

SOUND STORM
LABORATORIES

User's Manual!

SSV-TS20

CONNECTIONS

TVTUNER MODULE

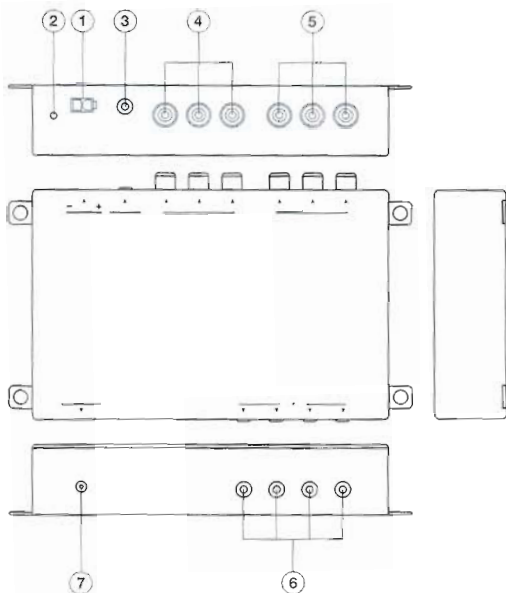


FIG.1

CONTROL & FUNCTION KEYS

REMOTE CONTROL

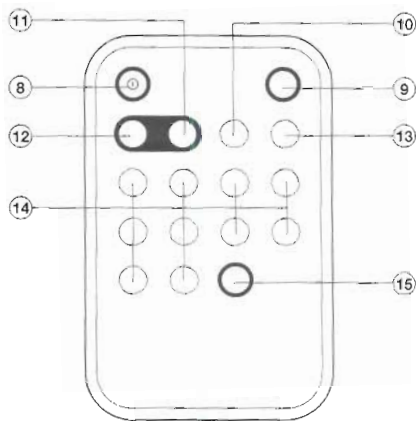


FIG.2

- | | |
|----------|----------|
| 8. POWER | 12. CH- |
| 9. TV/AV | 13. DSP |
| 10. AUTO | 14. 0~9 |
| 11. CH+ | 15. -/-- |

EXPLANATION OF CONNECTION AND CONTROLS

This unit is a separate TV tuner that can accept A/V input from a source unit (such as a DVD player) and output that A/V signal or TV signal to a monitor. Your antenna system (TV reception) is also connected to this tuner module.

1 DC 12 V IN

Through this **DC 12V IN** jack (1), provide DC 12V power supply to the unit.

2 POWER INDICATOR

When 12 volts is supplied to the unit this indicator will illuminate red and the unit will be in stand-by mode. Press the POWER button (8) on the remote control (see Fig. 2) to turn the unit on. The indicator (2) will turn from red to green.

3. REMOTE

This **REMOTE** jack (3) is connected to an external remote control receiver. Point the remote control handset (see FIG.2) to the remote sensor of the receiver to control the unit.

4 VIDEO/AUDIO IN

These three jacks (4) are connected to the DVD/VCD's VIDEO/AUDIO output terminal. The Red jack is the AUDIO-RIGHT signal input; the White jack is the AUDIO-LEFT signal input; the Yellow jack is the VIDEO signal input.

5 VIDEO/AUDIO OUT

These three jacks (5) are connected to the monitor's VIDEO input terminal and AUDIO input terminal. The Red jack is the AUDIO-RIGHT signal output; the White jack is the AUDIO-LEFT signal output; the Yellow jack is the VIDEO signal output.

6 DIVERSITY ANTENNA INPUT

There are four antenna input jacks (6) for antenna input.

7 DC 12 V OUT

If the monitor that's connected has no proper power input through this **DC 12V OUT** jack (7), you can connect 12 DC power from a different source.

REMOTE CONTROL (see FIG.2)

8 POWER

Press **POWER** button (8) to turn the unit ON or OFF.

9 TV/AV

Press the **TV/AV** button (9) to select between TV and AV mode.

10 AUTO

Press **AUTO** button (10) to enter into auto searching mode, then press CH+ button (11) to start searching TV channels.

11 CH+

Press the **CH+** button (11) to choose channel upward.

12 CH-

Press the **CH-** button (12) to choose channel downward.

13 DSP

Press **DSP** button (13), the screen will display the current status such as TV channel / AV.

14 0~9

The numeric buttons (**0, 1~9**) (14) allow you to select the corresponding channel directly.

15 -/--

Press the digital select button (**-/--**) (15) cooperatively used with numeric buttons to select channel desired.